 


PRISLISTE  
OVER  
RESERVEDELE  
FOR  
*Ford Model T.*

**224.6**  
sys.nr. 2473

---

F. BÜLOW & Co. :: KØBENHAVN C.  
KNIPPESBROGADE 2 :: TELEFONER 7757 & 7798

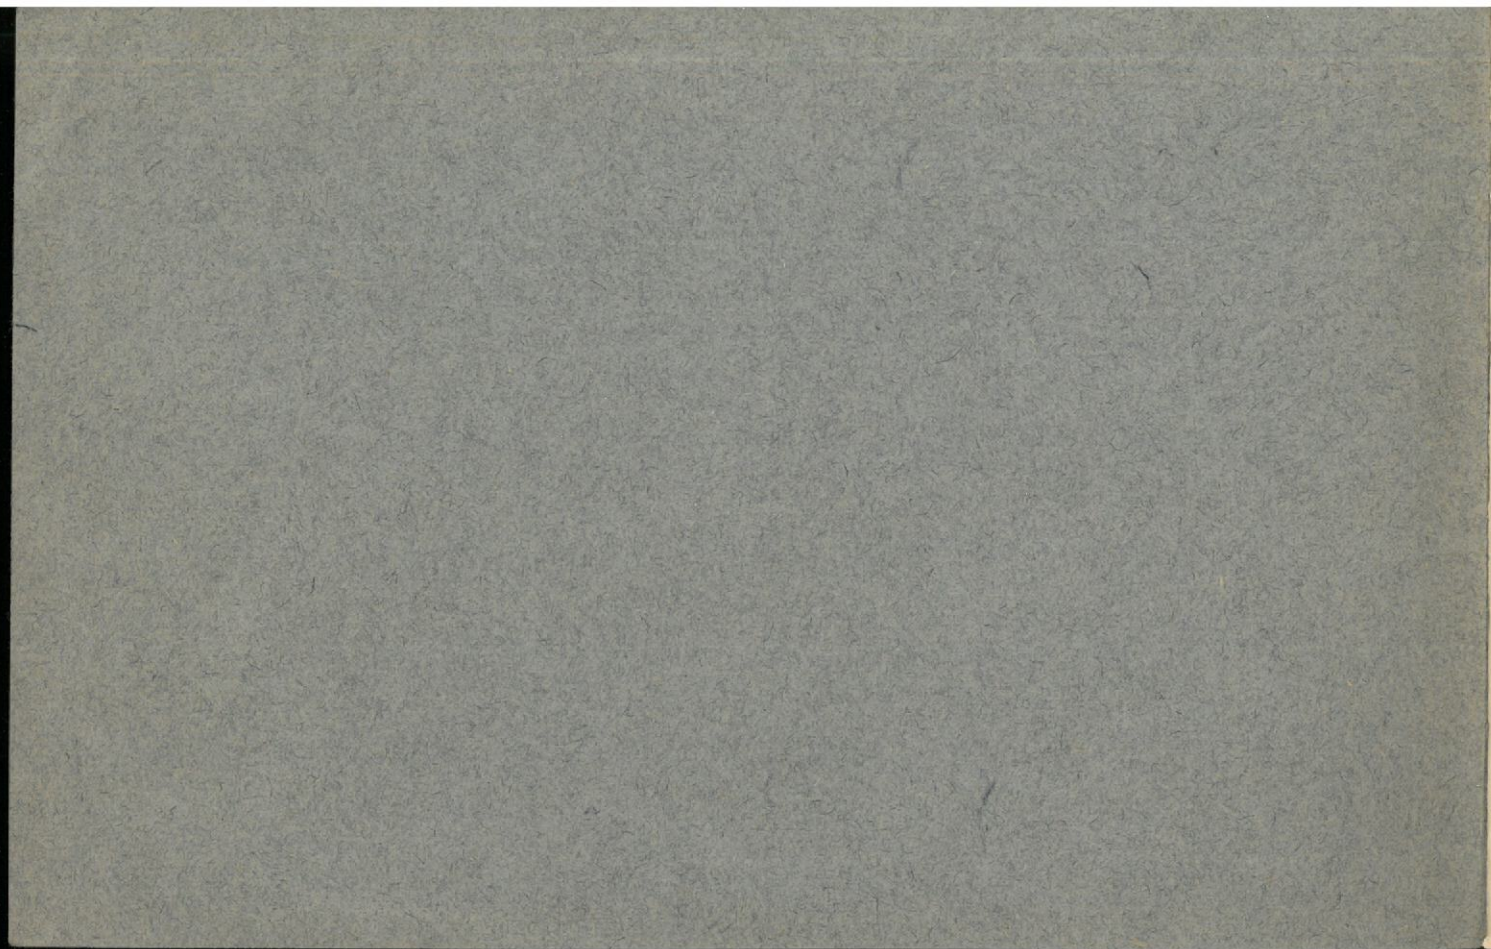 


Sys. nr. 2473



PRISLISTE

OVER

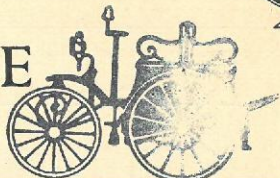


RESERVEDELE

DANSK VETERANBIL KLUB

FOR



 MODEL T.

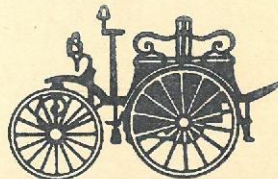

DANSK VETERANBIL KLUB


F. BÜLOW & Co. :: KØBENHAVN C.

KNIPPESBROGADE 2 :: TELEFONER 7757 & 7798



IVAR HÆGGSTRÖMS  
BOKTRYCKERI A. B.  
STOCKHOLM 1915



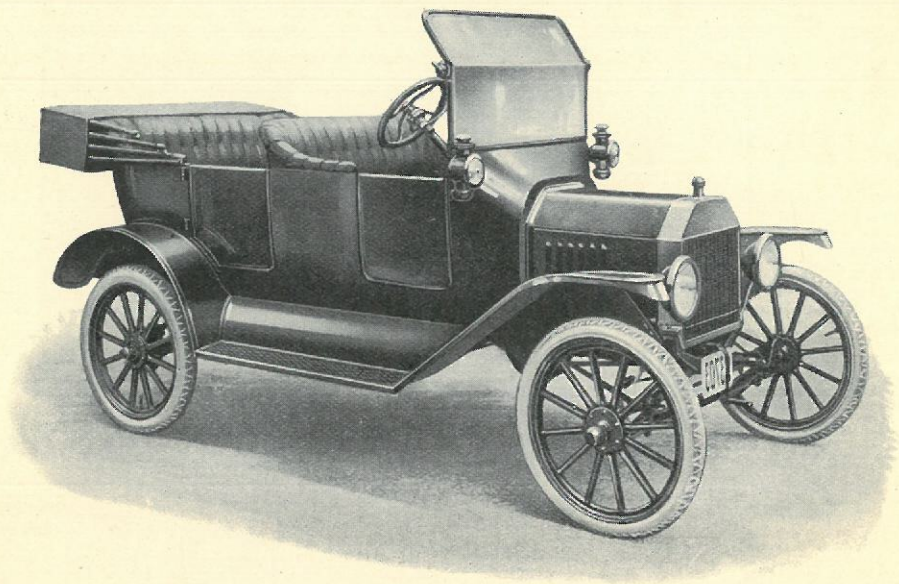 

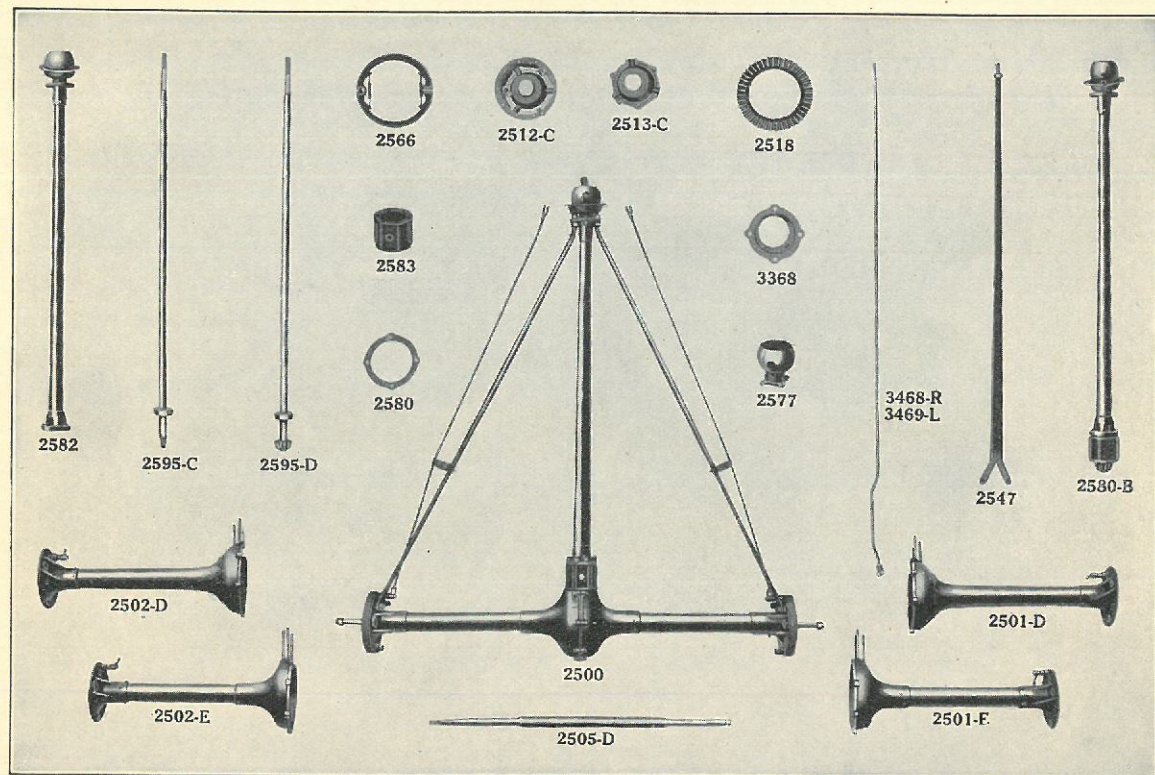 


Plate No. 1—Rear Axle Parts



Part No.	Name of Part	Year	Price	Part No.	Name of Part	Year	Price
<b>REAR AXLE</b>				<b>REAR AXLE—Continued</b>			
			Kr.				Kr.
2500	Rear axle assembly . . . . .	1909-14	360.—	2520	Diff. gear . . . . .	1909-14	12.—
2501	Axle housing—right . . . . .	1909-12	60.—	2520B	Diff. gear . . . . .	1913-14	12.—
2501D	Axle housing—right . . . . .	1913-14	60.—	2520C	Diff. gear . . . . .	1914-15	12.—
2502	Axle housing—left . . . . .	1909-12	60.—	2521B	Diff. gear key . . . . .	1911-14	0.30
2502D	Axle housing—left . . . . .	1913-14	60.—	2522	Diff. gear pin . . . . .	1909-10	0.30
2503B	Axle housing bolt and nut . . . . .		0.30	2522B	Diff. gear pin . . . . .	1913-14	0.30
2503C	Axle housing bolt and nut . . . . .		0.30	2523	Diff. gear thrust washer . . . . .	1909-14	0.90
2503E	Axle housing bolt and nut . . . . .		0.30	2524	Diff. pinion . . . . .	1909-10	4.50
2505	Axle shaft—substitute 2505A . . . . .	1909-10		2524B	Diff. pinion . . . . .	1911-14	4.50
2505A	Axle shaft with gear and taper hub . . . . .	1912-14	36.—	2525	Diff. pinion bushing . . . . .	1909-10	1.20
2505D	Axle shaft—tapered . . . . .	1912-14	15.—	2525B	Diff. pinion bushing . . . . .	1911-14	1.20
2506	Axle shaft washer . . . . .	1909-14	0.30	2526	Diff. spider with bushing . . . . .	1909-10	9.—
2508	Axle shaft roller bearing . . . . .	1909-14	6.—	2526B	Diff. spider with bushing . . . . .	1911-15	9.—
2509	Axle shaft roller bearing sleeve . . . . .	1909-14	1.50	2527	Diff. spider bushing . . . . .	1909-14	1.80
2510	Axle housing cap . . . . .	1909-14	0.30	2528	Diff. thrust plate . . . . .	1909-14	2.40
2510A	Axle outer roller bearing steel washer . . . . .	1909-14	0.30	2529	Diff. thrust plate . . . . .	1909-14	0.90
2510B	Axle outer roller bearing felt washer . . . . .	1909-14	0.30	2530	Diff. thrust plate pin . . . . .	1909-14	0.30
2512	Diff. case—left (includes bushing) . . . . .	1909-10	18.—	2531	Diff. thrust plate pin . . . . .	1909-14	0.30
2512B	Diff. case—left (includes bushing) . . . . .	1911-13	18.—	2532	Diff. housing oil plug . . . . .	1909-14	0.30
2512C	Diff. case—left (no bushing used) . . . . .	1914	15.—	2545B	Rear axle grease cup . . . . .	1909-14	0.90
2513	Diff. case—right (includes bushing) . . . . .	1909-10	15.—		Rear radius rod . . . . .	1909-14	15.—
2513B	Diff. case—right (includes bushing) . . . . .	1911-13	15.—	2548	Radius rod nut . . . . .	1909-14	0.30
2513C	Diff. case—right (no bushing used) . . . . .	1914	12.—	2549	Radius rod lock nut . . . . .	1909-14	0.30
2514	Diff. case stud and nut . . . . .	1909-14	0.60	2550	Radius rod lock washer . . . . .	1909-14	0.06
2517	Diff. case bushing . . . . .	1909-13	1.80	2551	Radius rod bolt . . . . .	1909-14	0.30
2518	Diff. drive gear . . . . .	1909-14	24.—	2554	Ball joint support bolt and nut . . . . .	1909-14	0.30
2519	Diff. drive gear screw . . . . .	1909-14	0.12	2557	Hub cam shaft—right . . . . .	1909-14	1.80
2519A	Diff. gear lock ring . . . . .	1909-14	0.30	2558	Hub cam shaft—left . . . . .	1909-14	1.80
				2559	Hub cam shaft bushing . . . . .	1909-14	0.90



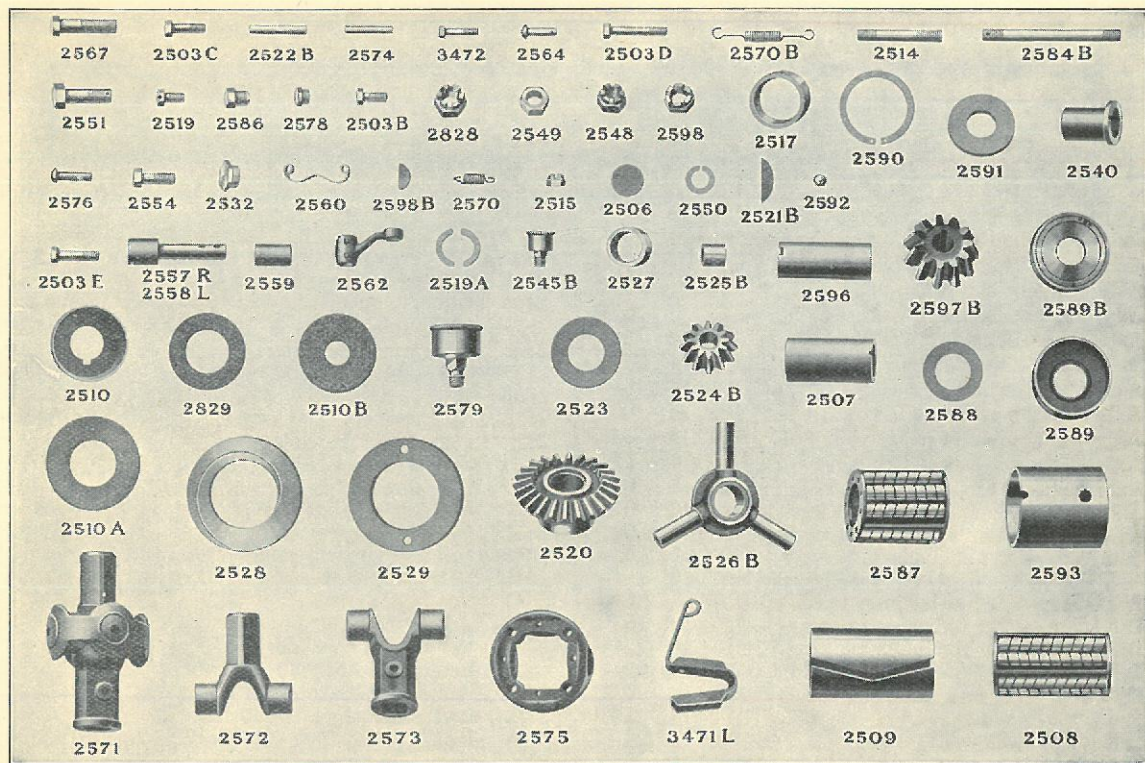 


Plate No. 2—Differential and Rear Axle Parts

Part No.	Name of Part	Year	Price	Part No.	Name of Part	Year	Price
<b>REAR AXLE—Continued</b>				<b>REAR AXLE—Continued</b>			
			Kr.				Kr.
2560	Hub brake spring . . . . .	1909-13	0.30	2589	D. S. ball race . . . . .	1911-14	2.10
2561	Hub brake spring rivet, per doz . . . . .	1909-14	0.30	2590	D. S. ball retainer . . . . .	1911-14	0.30
2562	Cam shaft lever . . . . .	1909-14	1.80	2591	D. S. ball thrust collar . . . . .	1911-14	2.70
2563	Cam shaft lever pin . . . . .	1909-14	0.12	2592	D. S. ball bearings, each . . . . .	1911-14	0.24
2564	Lever clevis pin . . . . .	1909-14	0.12	2593	D. S. roller bearing sleeve . . . . .	1911-14	6.00
2566	Hub brake shoe . . . . .	1909-14	3.50	2595B	D. S. only (tapered) . . . . .	1911-14	18.—
2567	Brake shoe support bolt . . . . .	1909-14	0.30	2595C	D. S. with sleeve and ball bearing . . . . .	1911-14	24.—
2568	Brake shoe support nut . . . . .	1909-14	0.18	2595D	D. S. with pinion, complete . . . . .	1911-14	36.—
2570	Brake shoe coil spring . . . . .	1909-12	0.30	2596	D. S. sleeve . . . . .	1911-14	5.10
2570B	Brake shoe coil spring . . . . .	1913-14	0.30	2597B	D. S. pinion . . . . .	1911-14	12.—
2571	UNIVERSAL JOINT ASSEMBLY . . . . .	1909-14	15.—	2598	D. S. castle nut . . . . .	1911-14	0.30
2572	Joint knuckle (male) . . . . .	1909-14	4.50	2598B	D. S. pinion key . . . . .	1911-14	0.30
2573	Joint knuckle (female) . . . . .	1909-14	6.—	2540	D. S. housing front bushing . . . . .	1909-14	3.60
2574	Joint knuckle pin . . . . .	1909-14	0.12	<b>REAR AXLE—60 INCH TREAD</b>			
2575	Joint ring, complete . . . . .	1909-14	4.50	2599	Rear axle assembly . . . . .	1909-14	360.—
2576	Joint ring rivets (per set 4) . . . . .	1909-14	0.30	2600	Rear axle housing—right . . . . .	1909-12	60.—
2577	Joint housing . . . . .	1909-14	4.50	2600B	Rear axle housing—right . . . . .	1913-14	60.—
2578	Joint housing plug . . . . .	1909-14	0.30	2601	Rear axle housing—left . . . . .	1909-12	60.—
2579	Ball joint grease cup . . . . .	1909-14	1.50	2601B	Rear axle housing—left . . . . .	1913-14	60.—
2580	Ball cap gasket . . . . .	1909-14	0.30	2602B	Rear axle shaft—tapered . . . . .	1911-14	15.—
2580B	DRIVE SHAFT AND HOUSING ASSEMBLY . . . . .	1909-14	84.—	2604	Rear radius rod . . . . .	1909-14	15.—
2582	D. S. tubing . . . . .	1911-14	32.—	<b>FRONT AXLE</b>			
2583	D. S. roller bearing housing . . . . .	1911-14	4.50	2690	Front axle assembly . . . . .	1909-14	132.—
2584	D. S. roller bearing stud and nut . . . . .	1911-13	0.60	2691	Front axle only . . . . .	1909-14	48.—
2584B	D. S. roller bearing stud and nut . . . . .	1911-14	0.60	2694	Spindle body—right . . . . .	1912-14	12.—
2586	D. S. roller bearing housing set screw . . . . .	1911-14	0.30	2695	Spindle body—left . . . . .	1912-14	12.—
2587	D. S. roller bearing . . . . .	1911-14	9.—				
2588	D. S. roller bearing distance plate . . . . .	1911-14	0.30				
2589B	D. S. ball bearing assembly . . . . .	1911-14	6.—				



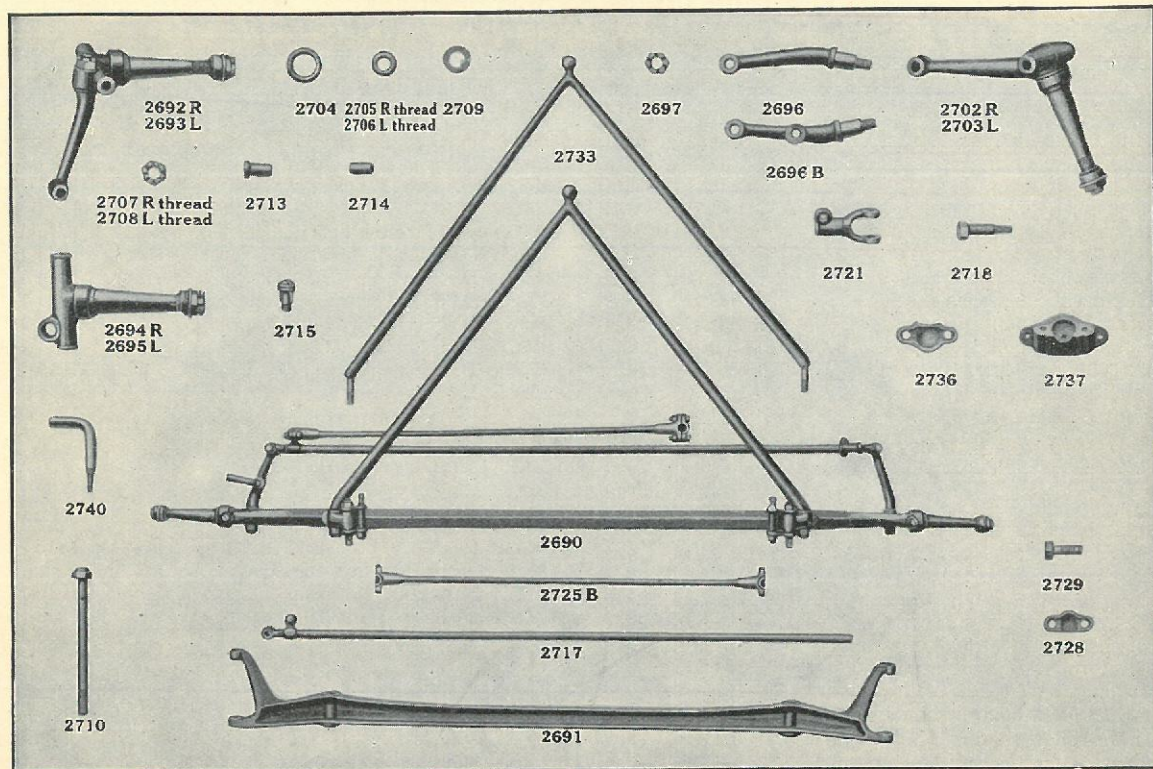 


Plate No. 3—Front Axle Parts



Part No.	Name of Part	Year	Price	Part No.	Name of Part	Year	Price
<b>FRONT AXLE—Continued</b>				<b>FRONT AXLE—Continued</b>			
			Kr.				Kr.
2696	Spindle arm—left . . . . .	1912-14	4.50	2737	Front radius rod ball socket . . . . .	1911-14	1.20
2696B	Spindle arm—right . . . . .	1912-14	4.50	2738	Front radius rod ball cap screw . . . . .	1909-10	0.30
2697	Spindle arm nut . . . . .	1912-14	0.30	2739	Front radius rod ball cap screw . . . . .	1909-14	0.30
2702	Spindle assembly—right . . . . .	1909-10	16.50	2740	Speedometer swivel joint support . . . . .	1912-14	1.20
2703	Spindle assembly—left . . . . .	1909-10	16.50	2760	FRONT AXLE ONLY . . . . .	1809-14	48.—
2704	Stationary cone . . . . .	1909-14	1.80	2761	Steering spindle con rod with yoke . . . . .	1909-14	15.—
2705	Adjusting cone—right thread . . . . .	1909-14	1.20	2762	Steering gear con rod . . . . .	1909-14	4.50
2706	Adjusting cone—left thread . . . . .	1909-14	1.20				
2707	Spindle nut—right thread . . . . .	1909-14	0.60	<b>WHEELS</b>			
2708	Spindle nut—left thread . . . . .	1909-14	0.60	2800B	Front wheel . . . . .	1909-14	40.—
2709	Spindle washer . . . . .	1909-14	0.12	2803C	Front hub assembly . . . . .	1909-14	18.—
2710	Spindle bolt . . . . .	1909-14	1.50	2804	Outer race . . . . .	1909-14	1.50
2711	Spindle bolt nut . . . . .	1909-14	0.30	2805	Inner race . . . . .	1909-14	2.10
2713	Spindle body bushing . . . . .	1909-14	1.50	2806	Outer ball retainer . . . . .	1909-14	0.30
2714	Spindle arm bushing . . . . .	1909-14	0.90	2807	Inner ball retainer . . . . .	1909-14	0.30
2715	Spindle oiler . . . . .	1909-14	0.60	2808	Dust ring . . . . .	1909-14	0.60
2716	Spindle con. rod with yoke . . . . .	1909-14	15.—	2809	Felt washer . . . . .	1909-14	0.30
2717	Spindle con. rod with ball pin . . . . .	1909-14	12.—	2810	Large balls, each . . . . .	1909-14	0.30
2718	Spindle con. rod bolt . . . . .	1909-14	0.50	2811	Small balls, each . . . . .	1909-14	0.24
2719	Spindle con. rod bolt nut . . . . .	1909-14	0.12	2814C	Rear wheel—blue (taper hub) . . . . .	1912-14	35.—
2720B	Spindle con. rod bolt oiler . . . . .	1909-14	0.60	2814D	Rear wheel less hub and brake drum . . . . .	1912-14	23.—
2721	Spindle con. rod yoke . . . . .	1909-14	3.00	2815C	REAR HUB (TAPERED) . . . . .	1912-14	12.—
2722	Steering yoke clamp bolt and nut . . . . .	1909-14	0.30	2816B	Rear hub key (for taper axle) . . . . .	1912-14	0.30
2725B	Steering gear con. rod . . . . .	1909-14	3.50	2817	Rear hub pin . . . . .	1909-10	0.12
2728	Ball socket cap . . . . .	1909-14	0.90	2818	Rear hub brake drum . . . . .	1909-14	3.—
2729	Ball socket bolt and nut . . . . .	1909-14	0.30	2819	Hub cap . . . . .	1909-14	1.50
2733	Front radius rod . . . . .	1909-14	18.—	2820	Hub bolt and nut . . . . .	1909-10	0.30
2734	Front radius rod nut . . . . .	1909-14	0.30	2822	Hub flange . . . . .	1909-10	1.80
2736	Front radius rod ball cap . . . . .	1909-14	1.20				

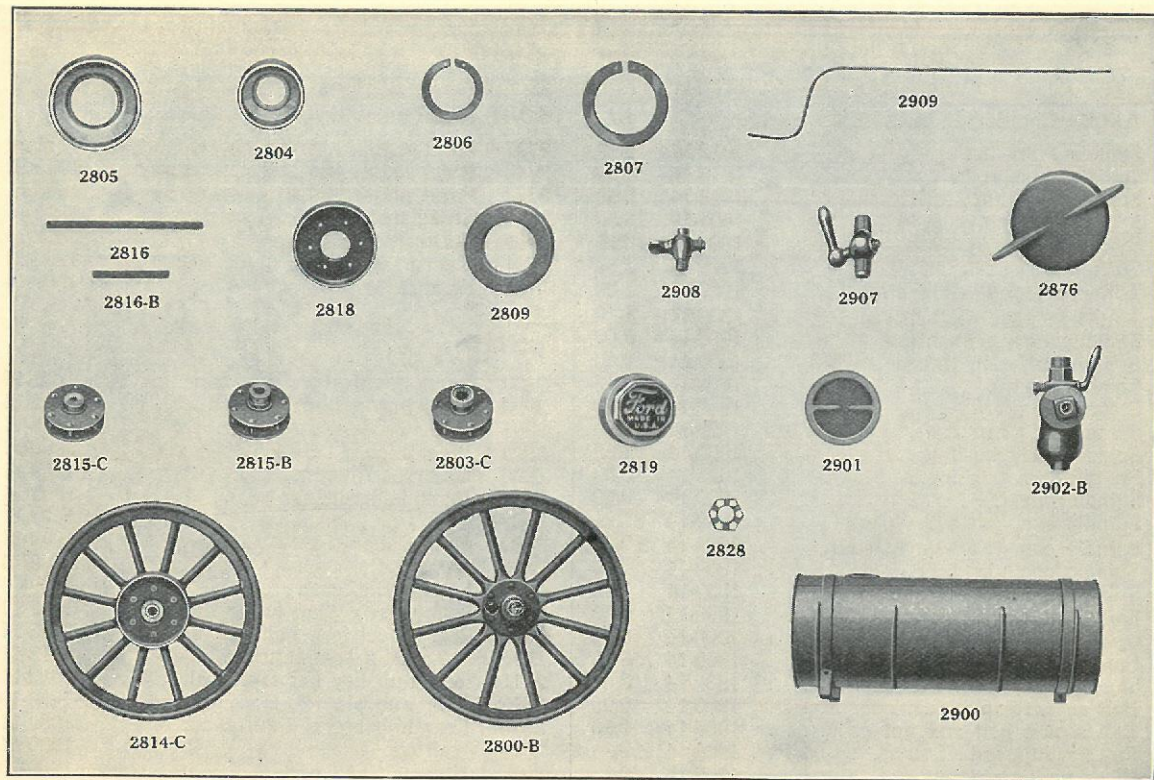 


Plate No. 4—Wheel and Gasoline Tank Parts



Part No.	Name of Part	Year	Price	Part No.	Name of Part	Year	Price
<b>WHEELS—Continued</b>				<b>GASOLINE TANK—TOURING CAR</b>			
			Kr.				Kr.
2825	Hub bolt and nut . . . . .	1911-14	0.30	2901	Filling plug . . . . .	1909-14	1.80
2827	Hub flange . . . . .	1911-14	1.80	2902B	Sediment bulb . . . . .	1909-14	10.—
2828	Rear hub lock nut . . . . .	1912-14	0.30	2903	Tank bolt and nut . . . . .	1909-14	0.60
<b>FRAME</b>				2907	Stop cock . . . . .	1909-14	1.20
2850	Frame assembly . . . . .	1909-14	72.—	2908	Pet cock . . . . .	1909-14	1.20
2851	Side member—right . . . . .	1909-13	18.—	2909	Feed pipe . . . . .	1909-14	1.50
2851B	Side member—right . . . . .	1914	18.—	2910	Feed pipe pack nut . . . . .	1909-14	0.30
2852	Side member—left . . . . .	1909-13	18.—	<b>MOTOR</b>			
2852B	Side member—left . . . . .	1914	18.—	3000	Cylinder . . . . .	1909-14	108.—
2853	Front cross member . . . . .	1909-13	6.—	3001	Cylinder head . . . . .	1909-14	24.—
2854	Rear cross member . . . . .	1909-13	6.—	3001 <sup>1/2</sup>	Cyl. head for metric spark plugs . . . . .	1909-14	24.—
2854B	Rear cross member . . . . .	1914	6.—	3002	Cyl. head gasket . . . . .	1909-14	5.—
2855	Front corner bracket—right . . . . .	1909-14	1.80	3003	Cyl. head cap screw . . . . .	1909-14	0.30
2856	Front corner bracket—left . . . . .	1909-14	1.80	3004	Cyl. head outlet connection . . . . .	1909-14	1.20
2857	Rear corner bracket—right . . . . .	1909-14	1.80	3005	Cyl. head outlet con gasket . . . . .	1909-14	1.—
2858	Rear corner bracket—left . . . . .	1909-14	1.80	3006	Cyl. head outlet hose . . . . .	1999-14	1.50
2863	Body bracket . . . . .	1909-14	0.90	3007	Cyl. head outlet hose clip . . . . .	1909-14	0.30
<b>GASOLINE TANK—RUNABOUT</b>				3008	Cyl. head outlet con screw . . . . .	1909-14	0.30
2875	Gasoline tank . . . . .	1911-12	36.—	3009	Cyl. front cover . . . . .	1909-11	4.50
2876	Filler cap . . . . .	1911-12	1.80	3009B	Cyl. front cover with set screw . . . . .	1912-14	4.50
2877	Sediment bulb . . . . .	1911-12	1.80	3010	Cyl. cover bolt . . . . .	1909-14	0.30
2878	Feed pipe . . . . .	1911-12	1.50	3011	Cyl. cover cap screw . . . . .	1909-14	0.30
2879	Feed pipe clip . . . . .	1911-12	0.30	3012	Cyl. cover felt . . . . .	1909-14	0.30
2880	Tank bolt and nut . . . . .	1911-12	0.60	3013	Cyl. cover liner . . . . .	1909-14	0.30
2883	Tank stop cock . . . . .	1911-12	1.20	3014	Cyl. cover and crank case bolt and nut . . . . .	1909-14	0.30
2900	Gasoline tank . . . . .	1909-14	24.—	3015	Cyl. water inlet connection . . . . .	1909-14	1.20
				3016	Cyl. inlet con screw . . . . .	1909-14	0.30
				3018	Cyl. water inlet gasket . . . . .	1909-14	0.75



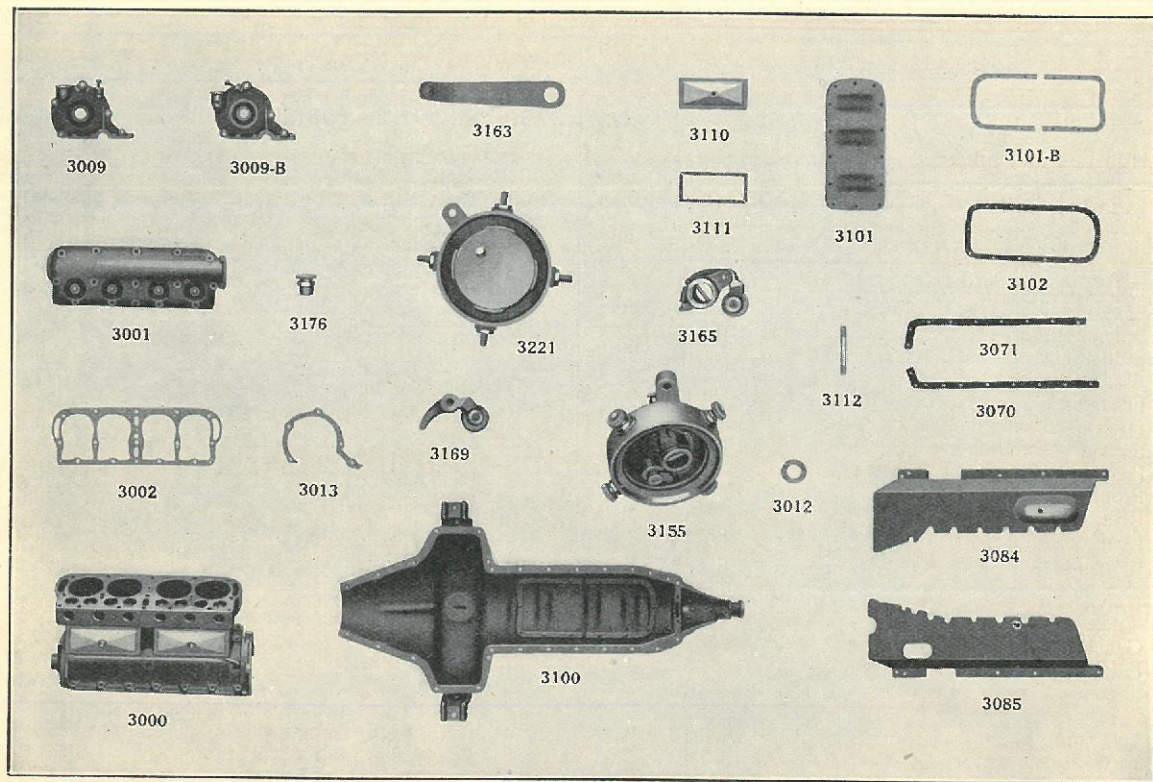 


Plate No. 5—Motor Parts

Part No.	Name of Part	Year	Price	Part No.	Name of Part	Year	Price
<b>MOTOR—Continued</b>				<b>MOTOR—Continued</b>			
			Kr.				Kr.
3019	Cyl. water jacket plug . . . . .	1909-14	0.30	3050	Cam shaft large gear lock nut . . . . .	1909-11	0.90
3020	PISTON COMPLETE . . . . .	1909-14	12.—	3050B	Cam shaft large gear lock nut . . . . .	1912-14	0.90
3021	Piston only . . . . .	1909-14	6.50	3051	Cam shaft small gear key . . . . .	1909-14	0.30
3022	Piston pin . . . . .	1909-14	1.20	3052	Valve . . . . .	1909-14	1.80
3022 <sup>1</sup> / <sub>2</sub>	Piston pin bushing . . . . .	1909-14	1.20	3053	Valve bushing . . . . .	1909-10	0.90
3023	Piston ring . . . . .	1909-14	0.90	3053 <sup>1</sup> / <sub>2</sub>	Valve bushing . . . . .	1911-12	0.90
3024	CONNECTING ROD . . . . .	1909-14	15.—	3054	Valve spring . . . . .	1909-14	0.30
3025	Con. rod cap bolt and nut . . . . .	1909-14	0.60	3056	Valve spring seat . . . . .	1909-14	0.12
3029	Con. rod clamp screw . . . . .	1909-14	0.30	3057	Valve spring seat pin . . . . .	1909-14	0.06
3030	CRANK SHAFT . . . . .	1909-14	75.—	3058	Push rod . . . . .	1909-14	1.20
3031	C. S. rear bearing cap . . . . .	1909-14	4.50	3060	Exhaust pipe . . . . .	1909-12	6.—
3032	C. S. front bearing cap . . . . .	1909-14	3.60	3060B	Exhaust pipe . . . . .	1913-14	6.—
3033	C. S. center bearing cap . . . . .	1909-14	3.60	3061	Exhaust pipe pack nut . . . . .	1909-14	2.40
3034	C. S. bearing bolt—center and front . . . . .	1909-14	0.90	3062	Inlet pipe . . . . .	1909-14	9.—
3035	C. S. bearing bolt nut . . . . .	1909-14	0.30	3063	Inlet and exh. pipe gasket . . . . .	1909-14	0.30
3036	C. S. rear bearing bolt . . . . .	1909-14	0.90	3064	Inlet and exh. pipe gland . . . . .	1909-14	0.30
3037	C. S. center bearing liner . . . . .	1909-14	0.30	3065	Inlet and exh. pipe clamp . . . . .	1909-14	0.60
3038	C. S. bearing liner, front . . . . .	1909-14	0.30	3066	Inlet and exh. clamp stud and nut . . . . .	1909-14	0.30
3039	C. S. rear bearing liner . . . . .	1909-14	0.30	3068	Breather pipe . . . . .	1909-14	0.90
3040	C. S. starting pin . . . . .	1909-14	0.30	3069	Crank case (substitute 3100 and 3376) . . . . .	1909-10	72.—
3041	CAM SHAFT . . . . .	1909-14	27.—	3069 <sup>1</sup> / <sub>2</sub>	Crank case front end bearing . . . . .	1909-10	9.—
3042	Cam shaft front bearing . . . . .	1909-14	1.50	3070	Crank case and cyl. gasket—left . . . . .	1909-14	0.30
3043	Cam shaft center bearing . . . . .	1909-14	1.50	3071	Crank case and cyl. gasket—right . . . . .	1909-14	0.30
3044	Cam shaft rear bearings . . . . .	1909-14	1.80	3072	Crank case and cyl. cover cap screw . . . . .	1909-14	0.30
3045	Cam shaft bearing ring . . . . .	1909-14	0.30	3073	Crank case arm bolt and nut—side . . . . .	1909-14	0.60
3046	Cam shaft bearing set screw . . . . .	1909-14	0.30	3074	Crank case arm bolt and nut—top . . . . .	1909-14	0.30
3047	Cam shaft gear—large . . . . .	1909-14	8.—	3076	Crank case front frame bearing . . . . .	1909-14	3.60
3048	Cam shaft gear—small . . . . .	1909-14	5.—	3077	Crank case front bearing cap . . . . .	1909-14	1.50
3049	Cam shaft gear dowel pin . . . . .	1909-14	0.18	3078	Crank case front bearing screw . . . . .	1909-14	0.30




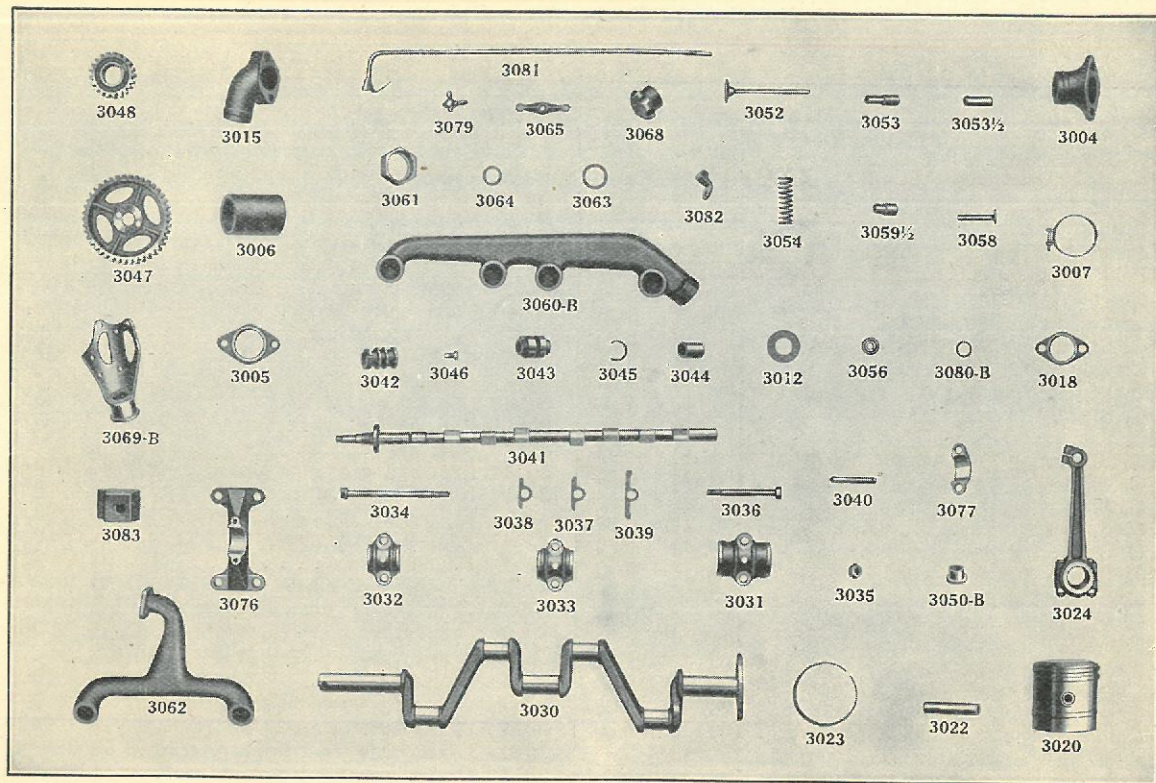 



Plate No. 6—Motor Parts

 

Part No.	Name of Part	Year	Price	Part No.	Name of Part	Year	Price
<b>MOTOR—Continued</b>				<b>COMMUTATOR—Continued</b>			
			Kr.				Kr.
3079	Crank case oil cock . . . . .	1909-14	1.50	3169	Com. arm with roller . . . . .	1912-14	1.50
3080	Crank case drain cup plug . . . . .	1909-14	0.30	3170	Com. roller arm spring . . . . .	1912-14	0.30
3080B	Crank case drain cup plug gasket . . . . .	1909-14	0.30	3171	Com. roller pin locking pin . . . . .	1912-14	0.06
3081	Crank case oil tube . . . . .	1909-14	1.80	3173	Com. arm pin . . . . .	1912-14	0.30
3082	Crank case oil tube clamp . . . . .	1909-14	0.30	3175	Commutator only . . . . .	1912-14	9.—
3083	Crank case arm block . . . . .	1909-14	0.30	3176	Com. oiler . . . . .	1912-14	0.60
3084	Engine pan—right . . . . .	1909-14	2.40	3177	Com. felt ring . . . . .	1012-14	0.30
3085	Engine pan—left . . . . .	1909-14	2.40	3204	Com. body screw . . . . .	1909-14	0.12
3088	Engine pan bolt and nut . . . . .	1909-12	0.24	3206	Com. brush cap . . . . .	1909-14	0.30
3088B	Engine pan and hood board bolt and nut . . . . .	1909-14	0.30	3207	Com. brush cap pin . . . . .	1909-14	0.06
3100	CRANK CASE WITH LOWER COVER . . . . .	1912-14	72.—	3210	Com. contact point nut . . . . .	1909-14	0.12
3101	Crank case lower cover . . . . .	1912-14	3.60	3211	Com. contact point fibre insulator . . . . .	1909-14	0.30
3101B	Crank case lower cover reinforcement . . . . .	1912-14	1.80	3212	Com. thumb nut . . . . .	1909-14	0.30
3102	Crank case lower cover gasket . . . . .	1912-14	0.60	3220	Com. lock nut . . . . .	1909-14	0.60
3103	Crank case lower cover screw . . . . .	1912-14	0.18	3221	Com. case with fibre assembled . . . . .	1912-14	5.40
3110	Cylinder valve cover . . . . .	1912-14	1.20	<b>MAGNETO</b>			
3111	Cylinder valve cover gasket . . . . .	1912-14	0.36	3250B	Magneto coil assembly . . . . .	1909-10	60.—
3112	Cylinder valve cover stud . . . . .	1912-14	0.60	3250C	Magneto coil assembly . . . . .	1911-14	60.—
3113	Cylinder valve cover nut . . . . .	1912-14	0.30	3250D	Magneto coil assembly . . . . .	1915	60.—
<b>COMMUTATOR</b>				3252	Magneto spool support screw . . . . .	1909-14	0.30
3155	Commutator assembly . . . . .	1915	15.—	3254	Magnet bolt . . . . .	1909-14	0.30
3160	Commutator assembly . . . . .	1912-14	15.—	3255	Magnet washer . . . . .	1909-10	0.30
3162	Com. case support bolt . . . . .	1912-14	0.30	3255B	Magnet bolt washer . . . . .	1911-14	0.06
3163	Com. case spring . . . . .	1912-14	0.30	3256	Magnet washer screw . . . . .	1909-10	0.30
3165	Com. brush assembly . . . . .	1912-14	3.—	3256B	Magnet washer screw . . . . .	1910	0.30
3167	Com. roller . . . . .	1912-14	0.60	3257	Magnet brass support . . . . .	1911-13	0.60
3168	Com. roller pin . . . . .	1912-14	0.18	3257B	Magnet brass support . . . . .	1910	0.60
				3260	Magneto contact assembly . . . . .	1909-14	3.—

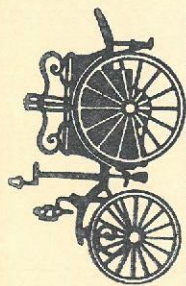

 DANSK VETERANBIL KLUB

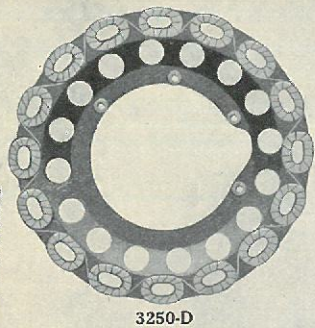

3250-D



3254



3272



3270



 
3278



3260



3257-B

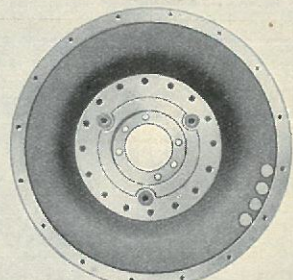

3269-C



3255-B



 
3279



3257




3277

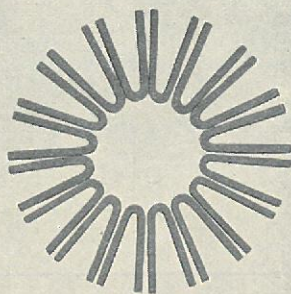


3276-B



 3277-B

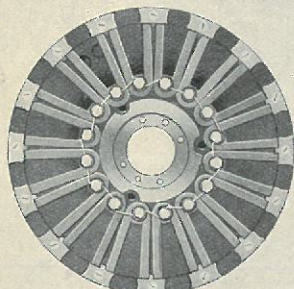

3269-E

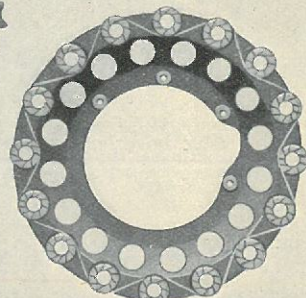 

3250-C



Part No.	Name of Part	Year	Price	Part No.	Name of Part	Year	Price
<b>MAGNETO—Continued</b>				<b>TRANSMISSION—Continued</b>			
			Kr.				Kr.
3261	Magneto contact thumb nut . . . . .	1909-14	0.60	3309	Trans. slow speed gear bushing . . .	1909-14	3.—
3262	Magneto contact spring . . . . .	1909-11	0.30	3310	Trans. brake drum rivet . . . . .	1909-14	0.06
3262B	Magneto primary contact point . . . . .	1909-14	0.30	3311	TRANS. BRAKE DRUM ASSEMBLY . . .	1909-14	21.—
3264	Magneto contact tube with fibre . . . . .	1909-14	1.20	3312	Trans. brake drum only . . . . .	1909-14	9.—
3266	Magneto contact fibre screw . . . . .	1909-14	0.06	3313	TRANS. TRIPLE GEAR ASSEMBLY . . .	1909-14	24.—
3269	Fly wheel . . . . .	1909	30.—	3314	Trans. triple gear bushing . . . . .	1909-10	1.80
3269B	Fly wheel . . . . .	1910	30.—	3314 <sup>1/2</sup>	Trans. triple gear flanged bushing . .	1911-14	1.80
3269C	Fly wheel . . . . .	1911-14	30.—	3315	Trans. triple gear shaft . . . . .	1909-14	1.80
3269D	Fly wheel with magnets assembled . . .	1912-14	84.—	3316	Trans. triple gear riveting pin . . . . .	1909-14	0.12
3270	Fly wheel cap screw . . . . .	1909-14	0.60	3317	Trans. driven gear . . . . .	1909-14	6.—
3271	Fly wheel dowel pin . . . . .	1909-14	0.60	3318	Trans. driven gear key . . . . .	1909-14	0.30
3272	Magneto coil support shim . . . . .	1909-14	0.60	3319	Trans. driven gear sleeve (on brake drum) . . . . .	1909-14	9.—
3275	Magnet (16) per set . . . . .	1909-10	72.—	3320B	Trans. driven gear sleeve bushing . .	1909-14	3.—
3276	Magnet (16) per set . . . . .	1911-14	24.—	3320C	Trans. driven gear sleeve bushing . .	1909-14	1.80
3277	Magnet clamp . . . . .	1911-12	0.30	3321	TRANS. DRIVING PLATE ASSEMBLY . .	1909-14	24.—
3277B	Magnet clamp . . . . .	1913-14	0.30	3323	Trans. driving plate screw . . . . .	1909-14	0.36
3278	Magnet clamp screw . . . . .	1911-14	0.30	3324	Trans. driving plate key . . . . .	1909-14	0.30
3279	Magneto contact washer . . . . .	1909-14	0.06	3325	Trans. driving plate rivet . . . . .	1909-14	0.06
<b>TRANSMISSION</b>				3326	Trans. driving plate hub . . . . .	1909-14	9.—
3300	Transmission assembly . . . . .	1909-14	270.—	3327	Trans. driving plate bushing . . . . .	1909-14	1.80
3301	Trans. reverse plate assembly . . . . .	1909-14	19.50	3328	Trans. thrust plate—small . . . . .	1909-14	0.90
3302	Trans. reverse plate . . . . .	1909-14	6.—	3329	Trans. thrust plate—large . . . . .	1909-14	0.90
3303	Trans. reverse gear . . . . .	1909-14	10.50	3330	Trans. distance plate . . . . .	1909-14	1.20
3304	Trans. reverse gear bushing . . . . .	1909-14	3.—	3331	Trans. gear shaft . . . . .	1909-14	15.—
3305	Trans. rev. & S. S. rivet . . . . .	1909-14	0.06	3332	Trans. clutch disc drum . . . . .	1909-14	9.—
3306	TRANS. SLOW SPEED PLATE ASSEMBLY	1909-14	21.—	3333	Trans. clutch disc drum key . . . . .	1909-14	0.60
3307	Trans. slow speed plate . . . . .	1909-14	6.—	3334	Trans. clutch disc drum set screw . .	1909-14	0.30
3308	Trans. slow speed gear . . . . .	1909-14	12.—	3336	Trans. clutch push ring . . . . .	1909-14	9.—

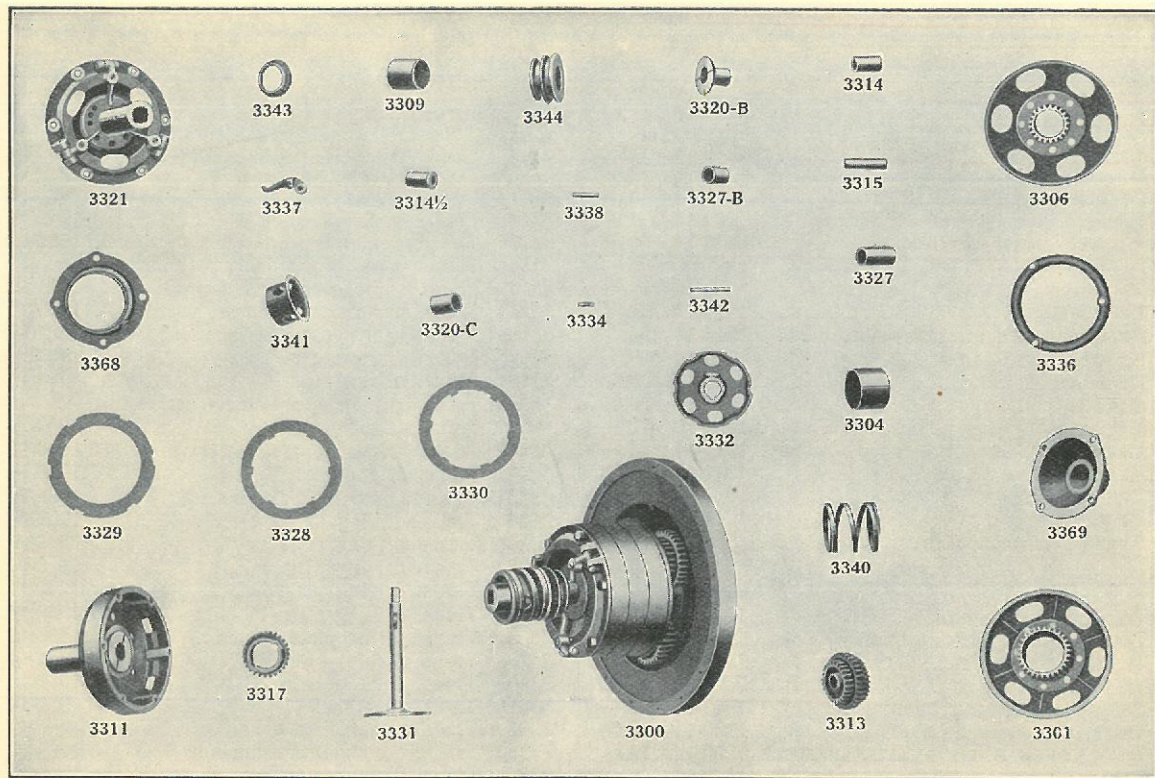 


Plate No. 8—Transmission Parts



Part No.	Name of Part	Year	Price	Part No.	Name of Part	Year	Price
<b>TRANSMISSION—Continued</b>				<b>TRANSMISSION CONTROL</b>			
			Kr.				Kr.
3337	Trans. clutch finger . . . . .	1909-14	1.80	3400	Trans. clutch release ring . . . . .	1909-14	4.80
3337 <sup>1</sup> / <sub>2</sub>	Trans. clutch finger screw . . . . .	1909-14	0.30	3401	Clutch lever . . . . .	1909-14	1.80
3337 <sup>3</sup> / <sub>4</sub>	Trans. clutch finger washer . . . . .	1909-14	0.06	3402	Clutch lever shaft . . . . .	1909-12	1.50
3338	Trans. clutch finger pin . . . . .	1909-14	0.30	3402B	Clutch lever shaft . . . . .	1913-14	1.50
3340	Trans. clutch spring . . . . .	1909-14	1.80	3402C	Clutch lever shaft with release forks	1913-14	5.10
3341	Trans. clutch spring support . . . . .	1909-14	1.20	3403	Clutch lever screw and nut . . . . .	1909-14	0.60
3342	Trans. clutch spring thrust ring pin .	1909-14	0.30	3405	Clutch lever pin . . . . .	1909-14	0.18
3343	Trans. clutch spring thrust ring . . . .	1909-14	3.—	3406	Clutch release fork—right and left . .	1909-12	2.40
3344	Trans. clutch shift . . . . .	1909-14	6.—	3406B	Clutch release fork—right or left . . .	1913-14	1.80
<b>TRANSMISSION COVER</b>				3406C	Clutch release fork pin . . . . .	1913-14	0.12
3361	Trans. cover with square door . . . . .	1909-10	54.—	3408	Clutch release fork key . . . . .	1909-14	0.30
3362	Trans. cover bolt and nut . . . . .	1909-14	0.30	3409	Clutch release fork clamp screw . . . .	1909-14	0.30
3363	Trans. cover felt gasket (front) . . . .	1909-14	0.30	3411	Clutch lever clevis pin . . . . .	1909-14	0.12
3365	Trans. cover door (square) . . . . .	1909-10	4.50	3413	TRANSMISSION BAND ASSEMBLY . . . .	1909-14	6.—
3366	Trans. cover door gasket . . . . .	1909-10	0.60	3414	Trans. band ear . . . . .	1909-14	1.20
3367	Trans. cover door screw . . . . .	1909-14	0.30	3415	Trans. band washer . . . . .	1909-14	0.12
3368	Universal ball cap (rear) . . . . .	1909-14	3.60	3416	Trans. band lining . . . . .	1909-14	2.40
3369	Universal ball cap (front) . . . . .	1909-14	6.—	3419	Trans. band adjusting screw . . . . .	1909-14	0.60
3371	Universal ball cap bolt . . . . .	1909-14	0.30	3420	Trans. band adjusting screw nut . . . .	1909-14	0.30
3372	Universal ball cap bolt and nut . . . . .	1909-14	0.30	3421B	Trans. band ear iron rivet, per doz . .	1909-14	0.25
3374	Trans. cover bolt . . . . .	1909-14	0.30	3422B	Trans. band brass rivet, per doz . . . .	1909-14	0.30
3375	Trans. cover screw . . . . .	1909-14	0.30	3423B	Trans. band brass rivet, per doz . . . .	1909-14	0.30
3376	TRANS. COVER WITH SLOPING DOOR	1911-14	54.—	3425	Trans. band spring . . . . .	1909-14	0.30
3377	Trans. cover felt gasket . . . . .	1909-14	0.60	3426	Trans. band adjusting nut . . . . .	1909-14	0.18
3378	Trans. cover sloping door . . . . .	1911-14	1.80	3427	Slow speed shaft . . . . .	1909-14	1.80
3379	Trans. cover sloping door gasket . . . .	1911-14	0.30	3428	Slow speed notch . . . . .	1909-14	2.10
				3429	Slow speed notch pin . . . . .	1909-14	0.18
				3432	Speed lever . . . . .	1909-14	2.40

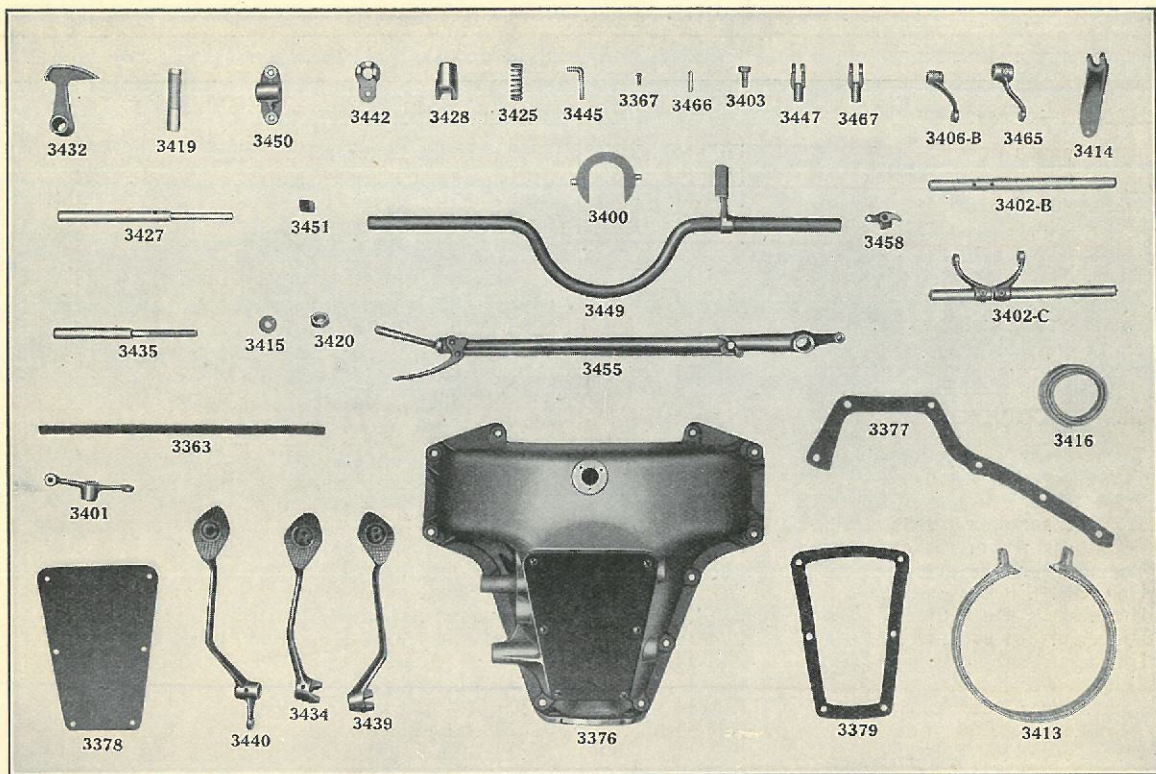 


Plate No. 9—Transmission Parts



Part No.	Name of Part	Year	Price	Part No.	Name of Part	Year	Price
<b>TRANSMISSION CONTROL—Continued</b>				<b>TRANSMISSION CONTROL—Continued</b>			
			Kr.				Kr.
3433	Speed lever clevis pin . . . . .	1909-14	0.12	3466	Hub brake lever pin . . . . .	1909-14	0.12
3434	Reverse pedal . . . . .	1909-14	4.50	3467	Hub brake lever clevis . . . . .	1909-14	1.20
3435	Brake and rev. pedal shaft . . . . .	1909-14	1.20	3468	Hub brake pull rod—right . . . . .	1909-14	2.70
3436	Brake and rev. pedal support . . . . .	1909-14	1.20	3469	Hub brake pull rod—left . . . . .	1909-14	2.70
3437	Brake and rev. support bolt and nut . . . . .	1909-14	0.60	3470	Hub brake rod support—right . . . . .	1909-14	0.90
3439	Brake pedal . . . . .	1909-14	4.50	3471	Hub brake rod support—left . . . . .	1909-14	0.90
3440	Clutch pedal . . . . .	1909-14	4.50	3472	Hub brake rod support bolt and nut . . . . .	1909-14	0.30
3441	Pedal pin . . . . .	1909-14	0.18	<b>STEERING GEAR</b>			
3442	Clutch pedal support . . . . .	1909-14	1.20	3500	Steering gear assembly . . . . .	1909-10	96.—
3443	Clutch pedal support bolt and nut . . . . .	1909-14	0.30	3500B	Steering gear assembly . . . . .	1911	96.—
3445	Slow speed connection . . . . .	1908-14	0.60	3500C	Steering gear assemble . . . . .	1915	96.—
3446	Slow speed con. lock nut . . . . .	1909-14	0.12	3501	Steering gear rim . . . . .	1909-10	6.—
3447	Slow speed con. clevis . . . . .	1909-14	1.20	3501B	Steering gear rim . . . . .	1911-14	6.—
3448	Controller quadrant . . . . .	1909-14	2.40	3502	Steering gear rim screw . . . . .	1909-14	0.12
3449	CONTROLLER SHAFT WITH SPEED LE- VER . . . . .	1909-14	6.—	3503	Steering gear spider . . . . .	1909-10	6.—
3450	Controller shaft bracket . . . . .	1909-14	0.90	3503B	Steering gear spider . . . . .	1911-14	6.—
3451	Controller shaft bracket felt . . . . .	1909-14	0.12	3504	Steering gear cover . . . . .	1909-14	4.80
3452	Controller shaft bracket bolt and nut . . . . .	1909-14	0.30	3505	Steering gear cover screw . . . . .	1909-14	0.12
3455	HAND BRAKE LEVER ASSEMBLY . . . . .	1909-14	12.—	3506	Steering gear cover bushing . . . . .	1909-14	1.20
3456	Hand brake lever pin . . . . .	1909-14	0.12	3507	Steering gear internal gear case . . . . .	1909-14	6.—
3457	Hand brake lever key . . . . .	1909-14	0.30	3508	Steering gear case bushing . . . . .	1909-14	4.80
3458	Hand brake lever pawl . . . . .	1909-14	0.90	3509	Steering gear quadrant . . . . .	1909-14	4.80
3459	Hand brake lever pawl pin . . . . .	1909-14	0.30	3510	Steering gear quadrant pin . . . . .	1909-14	0.18
3460	Hand brake lever pawl rod . . . . .	1900-14	0.90	3511	Steering gear wheel nut . . . . .	1909-14	1.20
3462	Hand brake lever pawl lift . . . . .	1909-14	1.20	3512	Steering gear tubing assembly . . . . .	1909-10	48.—
3463	Hand brake lever pawl lift spring . . . . .	1909-14	0.30	3512B	Steering gear tubing assembly . . . . .	1911	48.—
3465	HUB BRAKE LEVER ON CONTROLLER SHAFT . . . . .	1909-14	2.40	3512C	Steering gear tubing assembly . . . . .	1912-14	48.—
				3512D	Steering gear tubing assembly . . . . .	1911	48.—

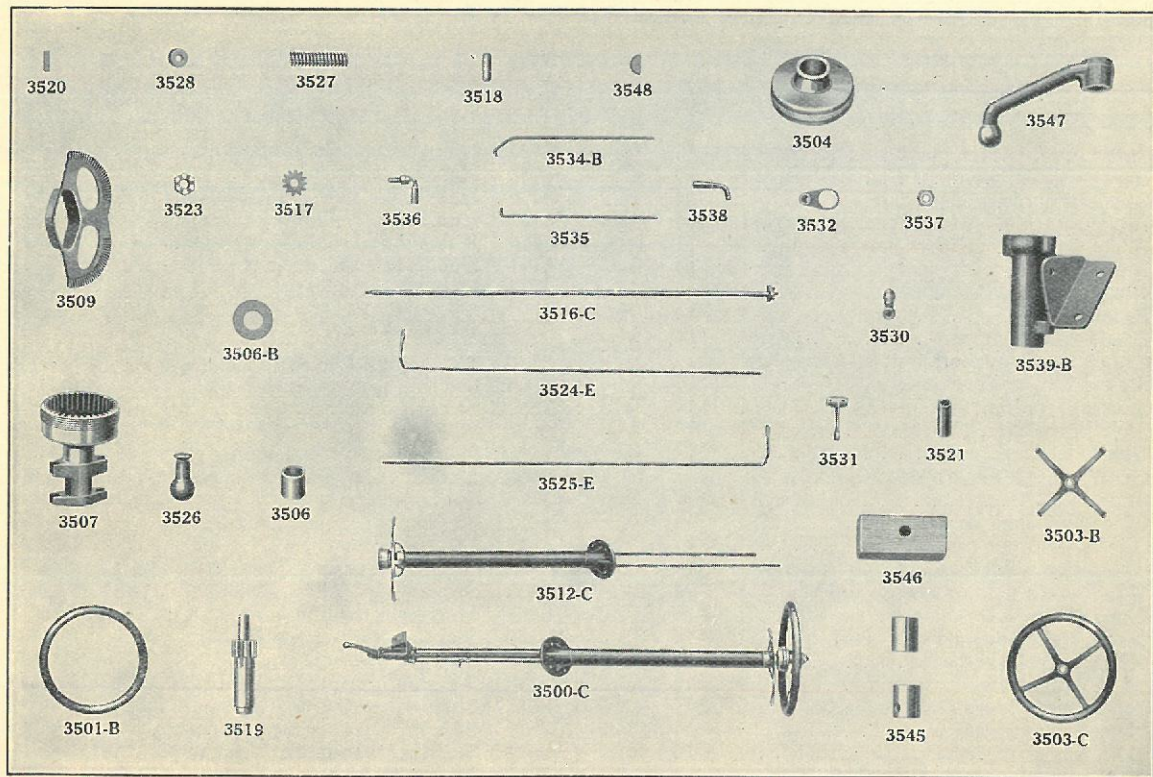 


Plate No. 10—Steering Gear Parts



Part No.	Name of Part	Year	Price	Part No.	Name of Part	Year	Price
<b>STEERING GEAR—Continued</b>				<b>STEERING GEAR—Continued</b>			
			Kr.				Kr.
3513	Steering tubing flange screw . . . . .	1909-10	0.30	3531	Throttle rod lever . . . . .	1909-14	1.50
3513B	Steering tubing flange screw . . . . .	1911-14	0.30	3532	Throttle rod guide . . . . .	1909-14	1.50
3513C	Steering tubing flange screw . . . . .	1911-14	0.30	3534	Commutator pull rod . . . . .	1909-11	1.20
3514	Steering tubing flange screw nut . . . . .	1909-14	0.30	3534B	Commutator pull rod . . . . .	1912-14	1.20
3516	Steering gear post . . . . .	1909-10	12.—	3535	Carburetor pull rod . . . . .	1909-14	1.20
3516B	Steering gear post . . . . .	1911	12.—	3536	Ball and socket joint . . . . .	1909-14	1.20
3516C	Steering gear post . . . . .	1912-14	12.—	3537	Ball and socket joint nut . . . . .	1909-14	0.18
3516D	Steering gear post . . . . .	1911	12.—	3538	Carburetor pull rod adjustment . . . . .	1909-14	0.90
3517	Steering gear pinions, each . . . . .	1909-14	1.50	3539	Steering post bracket with bushing . . . . .	1909-10	9.—
3518	Steering gear pinion pin . . . . .	1909-14	0.30	3539B	Steering post bracket with bushing . . . . .	1911-12	9.—
3519	Steering gear drive pinion . . . . .	1909-14	4.50	3539C	Steering post bracket with bushing . . . . .	1911	9.—
3520	Steering gear drive pinion key . . . . .	1909-14	0.30	3540	Steering post bracket bolt . . . . .	1909-14	0.90
3521	Steering gear pinion shaft bushing . . . . .	1909-14	1.20	3541	Steering post bracket bolt and nut . . . . .	1909-14	0.30
3523	Steering gear post castle nut . . . . .	1909-14	0.30	3544	Steering post bracket felt washer . . . . .	1909-14	0.30
3524	Throttle rod . . . . .	1909-10	2.40	3545	Steering post bracket bushing . . . . .	1909-14	3.60
3524B	Throttle rod . . . . .	1911	2.40	3546	Steering post bracket block . . . . .	1909-14	0.60
3524C	Throttle rod . . . . .	1912	2.40	3547	Steering gear ball arm . . . . .	1909-14	4.50
3524D	Throttle rod . . . . .	1911	2.40	3548	Steering gear ball arm key . . . . .	1909-14	0.30
3524E	Throttle rod . . . . .	1914	2.40	3563	Steering post bracket grease cup . . . . .	1909-14	0.90
3525	Lead rod . . . . .	1909-10	2.40	<b>BODY PARTS</b>			
3525B	Lead rod . . . . .	1911	2.40	3601	Body bracket on body . . . . .	1910-12	0.60
3525C	Lead rod . . . . .	1912	2.40	3601B	Body bracket on body . . . . .	1910-14	0.60
3525D	Lead rod . . . . .	1911	2.40	3601C	Body bracket on frame . . . . .	1911-12	2.40
3525E	Lead rod . . . . .	1914	2.40	3602D	Body bracket con. bolt and nut . . . . .	1910-12	0.30
2526	Lead and throttle handle . . . . .	1909-14	1.20	3611	Tonneau door handle . . . . .	1910-11	3.60
3527	Lead and throttle rod spring . . . . .	1909-14	0.30	3611B	Door knob . . . . .	1912	0.90
3528	Lead and throttle rod collar . . . . .	1909-14	0.30	3617B	Tonneau door hinge assembly—right . . . . .		6.—
3529	Lead and throttle rod pin . . . . .	1909-14	0.12	3618B	Tonneau door hinge assembly—left . . . . .		6.—
3530	Lead rod lever . . . . .	1909-14	1.20				

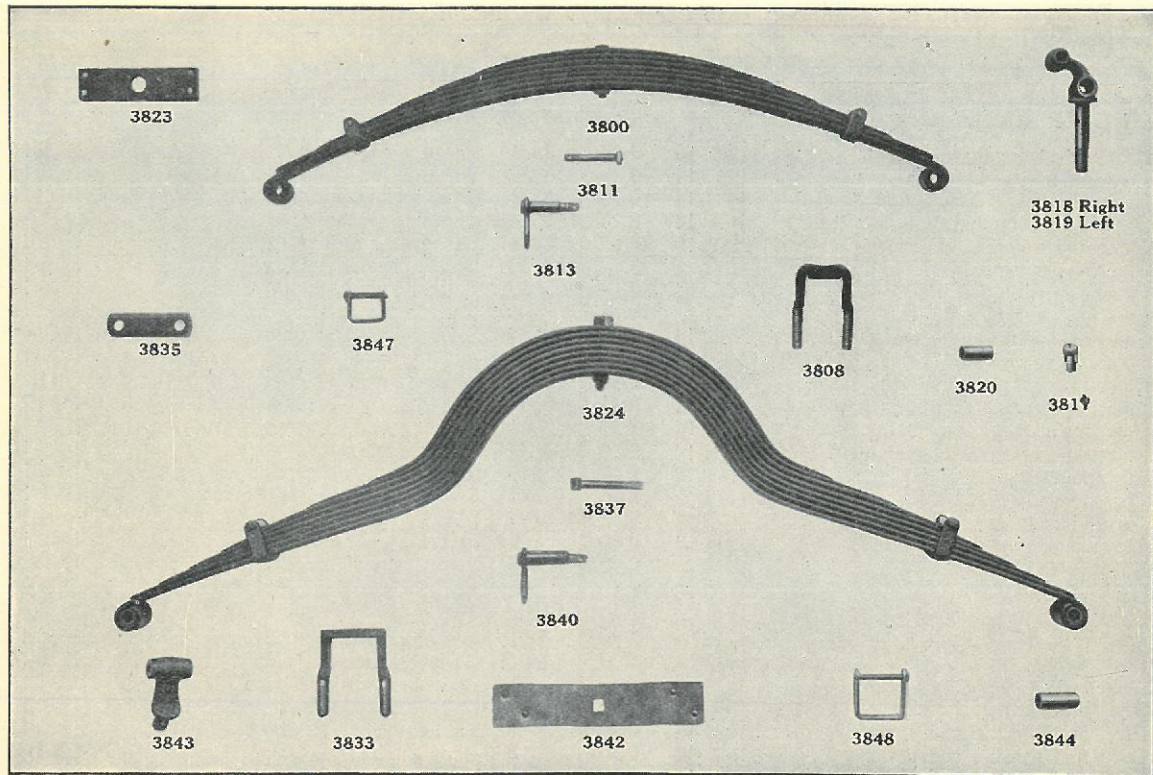 


Plate No. 11—Spring Parts



Part No.	Name of Part	Year	Price	Part No.	Name of Part	Year	Price
<b>BODY PARTS—Continued</b>				<b>BODY PARTS—Continued</b>			
			Kr.				Kr.
3624	Front floor rubber matting . . . . .	1909-12	15.—	3661	Tail lamp bracket bolt and nut . . . . .	1909-14	0.30
3624B	Front floor rubber matting . . . . .	1912	12.—	3663	Gas lamp bracket (right) . . . . .	1909-14	4.50
3624C	Front floor rubber matting . . . . .	1913-14	12.—	3664	Gas lamp bracket (left) . . . . .	1909-14	4.50
3626	Floor board (first from dash) . . . . .	1909-14	2.10	3665	Gas lamp bracket nut . . . . .	1909-14	0.30
3627	Floor board (second) . . . . .	1909-14	2.10	3667	Front seat cushion . . . . .	1910	72.—
3628	Floor board (third) . . . . .	1909-14	2.10	3667B	Front seat cushion . . . . .	1911-12	72.—
3629	Floor board (fourth) . . . . .	1909-14	2.10	3667C	Front seat cushion . . . . .	1913	72.—
3630	Floor board forward plate for pedals . . . . .	1909-14	2.40	3667D	Seat cushion . . . . .	1913	60.—
3632	Floor board rear plate for pedals . . . . .	1909-14	3.—	3667E	Front seat cushion . . . . .	1914	60.—
3633	Floor board plate for side lever . . . . .	1909-14	2.40	3670	Rear seat cushion . . . . .	1910	72.—
3634	Dash . . . . .	1909-10	30.—	3670B	Rear seat cushion . . . . .	1911-12	72.—
3634B	Dash . . . . .	1911	30.—	3670C	Rear seat cushion . . . . .	1913	72.—
3634C	Dash . . . . .	1912	30.—	3670D	Rear seat cushion . . . . .	1914	60.—
3634D	Dash . . . . .	1913-14	30.—	3671	Oil lamp bracket—right (Town Car) . . . . .	1909-12	6.—
3635B	Dash brass moulding . . . . .	1911	6.—	3672	Oil lamp bracket—left (Town Car) . . . . .	1909-12	6.—
3635C	Dash brass moulding . . . . .	1912	6.—	3673	Oil lamp bracket—right (Coupe) . . . . .	1910	6.—
3638	Dash shield . . . . .	1909-14	1.20	3674	Oil lamp bracket—left (Coupe) . . . . .	1910	6.—
3639	Dash shield guide . . . . .	1909-14	1.20	3675	Tail lamp bracket (Coupe) . . . . .	1910-12	3.—
3640B	Dash bracket—left . . . . .	1911-14	3.—	3676	Cocoa mat . . . . .	1909-10	15.—
3641B	Dash bracket—right . . . . .	1911-14	3.—	3676B	Cocqa mat . . . . .	1911-14	15.—
3642	Dash bracket bolt and nut . . . . .	1909-14	0.30				
3645	Dash bracket top bolt and nut . . . . .	1909-14	0.30	<b>SPRINGS</b>			
3651	Dash to body bracket . . . . .	1909-14	0.90	3800	Front spring . . . . .	1909-14	27.—
3655	Oil lamp bracket right . . . . .	1909-14	1.80	3801	First leaf (main leaf) . . . . .	1909-14	7.50
3656	Oil lamp bracket—left . . . . .	1909-14	1.80	3802	Second leaf . . . . .	1909-14	5.40
3657	Oil lamp bracket screw and nut . . . . .	1909-14	0.60	3803	Third leaf . . . . .	1909-14	4.20
3660	Tail lamp bracket . . . . .	1909-12	1.50	3804	Fourth leaf . . . . .	1909-14	3.60
3660B	Tail lamp bracket . . . . .	1913-14	1.50	3805	Fifth leaf . . . . .	1909-14	3.—
3660C	Tail lamp bracket . . . . .	1912	1.50	3806	Sixth leaf . . . . .	1909-14	2.40

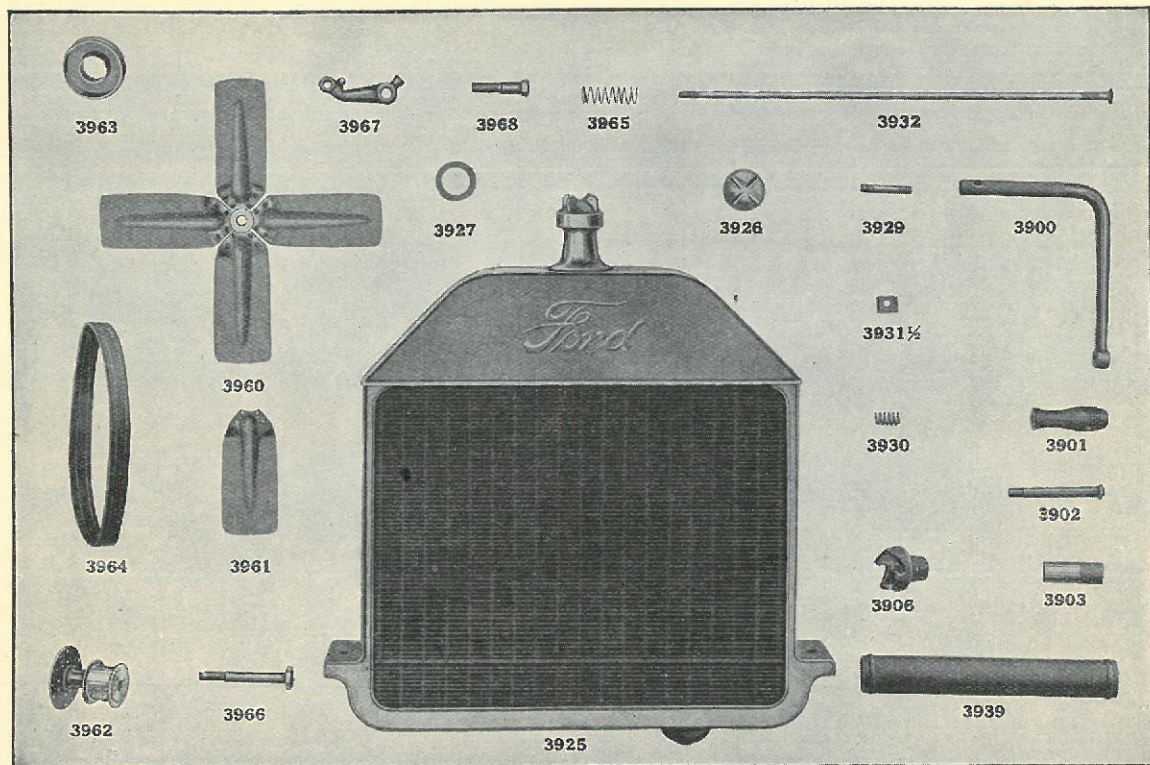 


Plate No. 12—Radiator Parts



Part No.	Name of Part	Year	Price	Part No.	Name of Part	Year	Price
<b>SPRINGS—Continued</b>				<b>SPRINGS—Continued</b>			
3807	Seventh leaf . . . . .	1909-14	1.50	3845	Rear spring perch nut . . . . .	1909-14	0.30
3808	Front spring clip . . . . .	1909-14	1.20	3847	Front spring retainer clip and rivet . . . . .	1909-14	0.60
3809	Front spring clip nut . . . . .	1909-14	0.30	3848	Rear spring retainer clip and rivet . . . . .	1909-14	0.60
3811	Front spring tie bolt and nut . . . . .	1909-14	0.60	<b>REAR SPRING—60 INCH TREAD</b>			
3813	Front spring hanger . . . . .	1909-14	3.—	3850	Rear spring . . . . .	1909-14	72.—
3815	Front and rear spring hanger nut . . . . .	1909-14	0.12	3851	Rear spring clip . . . . .	1909-14	1.20
3817	Front and rear spring hanger oiler . . . . .	1909-14	0.60	3852	Rear spring tie bolt and nut . . . . .	1909-14	0.60
3818	Front spring perch—right . . . . .	1909-14	6.—	3853	First leaf (main leaf) . . . . .	1909-14	15.60
3819	Front spring perch—left . . . . .	1909-14	6.—	3854	Second leaf . . . . .	1909-14	13.50
3820	Front spring perch bushing . . . . .	1909-14	1.20	3855	Third leaf . . . . .	1909-04	12.—
3821	Front spring perch nut . . . . .	1909-14	0.30	3856	Fourth leaf . . . . .	1909-14	10.50
3823	Front spring leather . . . . .	1909-14	0.60	3857	Fifth leaf . . . . .	1909-14	9.60
3824	REAR SPRING . . . . .	1909-14	72.—	3858	Sixth leaf . . . . .	1909-14	9.—
3825	First leaf (main leaf) . . . . .	1909-14	15.60	3859	Seventh leaf . . . . .	1909-14	7.80
3826	Second leaf . . . . .	1909-14	13.15	3860	Eighth leaf . . . . .	1909-14	6.60
3827	Third leaf . . . . .	1909-14	12.—	<b>STARTING CRANK</b>			
3828	Fourth leaf . . . . .	1909-14	10.50	3900	Starting crank only . . . . .	1909-14	4.50
3829	Fifth leaf . . . . .	1909-14	9.60	3901	Starting crank handle . . . . .	1909-14	1.50
3830	Sixth leaf . . . . .	1909-14	9.—	3902	Starting crank handle bolt . . . . .	1909-14	0.60
3831	Seventh leaf . . . . .	1909-14	7.80	3903	Starting crank sleeve . . . . .	1909-14	1.20
3832	Eighth leaf . . . . .	1909-14	6.60	3905	Starting crank ratchet pin . . . . .	1909-14	0.30
3834	Rear spring clip . . . . .	1909-14	1.20	3906	Starting crank ratchet . . . . .	1909-14	1.50
3833	Rear spring clip nut . . . . .	1909-14	0.30	3908	Starting crank spring . . . . .	1909-14	0.30
3835	Rear spring clip bar . . . . .	1909-14	0.60	<b>RADIATOR-THERMO SYPHON</b>			
3837	Rear spring tie bolt and nut . . . . .	1909-14	0.60	3925	Radiator . . . . .	1909-14	130.—
3840	Rear spring hanger . . . . .	1909-14	3.—	3926	Radiator cap . . . . .	1909-14	3.—
3842	Rear spring leather pad . . . . .	1909-14	0.60				
3843	Rear spring perch . . . . .	1909-14	3.60				
3844	Rear spring perch bushing . . . . .	1909-14	1.20				

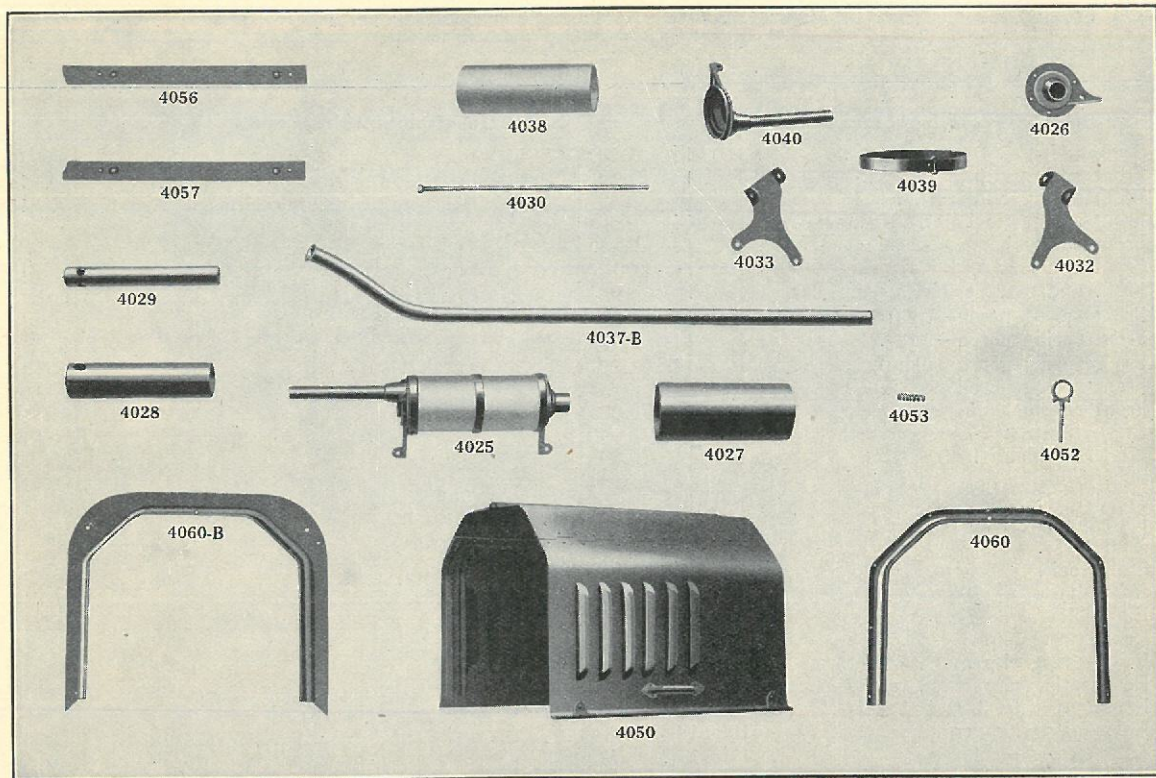 


Plate No. 13—Muffler and Hood Parts



Part No.	Name of Part	Year	Price	Part No.	Name of Part	Year	Price
<b>RADIATOR-THERMO SYPHON—Continued</b>				<b>MUFFLER—Continued</b>			
			Kr.				Kr.
3928	Radiator pad . . . . .	1909-14	0.30	4029	Muffler shell (inner) . . . . .	1909-14	3.60
3929	Radiator stud and nut . . . . .	1909-14	0.30	4030	Muffler rod only . . . . .	1909-14	0.60
3930	Radiator stud spring . . . . .	1909-14	0.30	4031	Muffler rod nut . . . . .	1909-14	0.12
3931 <sup>1/2</sup>	Radiator stud washer nut . . . . .	1909-14	0.30	4032	Muffler bracket—exhaust . . . . .	1909-14	1.80
3932	Radiator rod . . . . .	1909-14	0.90	4033	Muffler bracket—intake . . . . .	1909-14	1.80
3934	Radiator rod nut . . . . .	1909-14	0.12	4034	Muffler bracket bolt and nut . . . . .	1909-14	0.30
3939	Outlet connection pipe . . . . .	1909-14	1.50	4037B	Long exhaust pipe . . . . .	1909-14	7.20
3940	Outlet connection cock . . . . .	1909-14	1.20	4038	Muffler asbestos . . . . .	1909-14	0.90
3944	Outlet connection hose . . . . .	1909-14	1.20	4039	Muffler asbestos bands . . . . .	1909-14	0.60
3945	Outlet connection hose clip . . . . .	1909-14	0.30	4040	Rear muffler head with outlet pipe . . . . .	1909-14	4.50
3946	Radiator stay rod . . . . .	1911	0.90				
<b>RADIATOR FAN</b>				<b>HOOD</b>			
3960	Fan and pulley assembly . . . . .	1909-14	10.—	4050	Hood . . . . .	1909-15	39.—
3961	Fan blade . . . . .	1909-14	0.60	4051	Hood handle . . . . .	1909-15	1.50
3961B	Fan blade rivets, per dozen . . . . .	1909-14	0.30	4052	Hood clip . . . . .	1909-15	0.60
3962	Driven fan pulley . . . . .	1909-14	4.80	4053	Hood clip spring . . . . .	1909-15	0.30
3963	Fan drive pulley . . . . .	1909-14	1.80	4056	Hood board—left . . . . .	1909-15	2.40
3964	Fan belt . . . . .	1909-14	2.—	4057	Hood board—right . . . . .	1909-14	2.40
3966	Fan shaft . . . . .	1909-14	1.50	4058	Hood board bolt and nut . . . . .	1909-12	0.30
3967	Fan bracket . . . . .	1909-14	1.80	4060	Hood support on dash . . . . .	1909-14	6.—
3968	Fan bracket bolt . . . . .	1909-14	0.90	4061	Hood support screw . . . . .	1909-14	0.06
3970	Fan grease cup . . . . .	1909-14	0.90	4970	Hood . . . . .	1911	39.—
3973	Fan adjusting screw and nut . . . . .	1909-14	0.60	4071	Hood block—right . . . . .	1911	2.40
				4072	Hood block—left . . . . .	1911	2.40
<b>MUFFLER</b>				<b>WIRING</b>			
4025	Muffler assembly . . . . .	1909-14	15.—	4350	Spark plug wire . . . . .	1909-14	1.20
4026	Muffler head—intake . . . . .	1909-14	3.60	4351	Spark plug wire . . . . .	1909-14	1.20
4027	Muffler shell—outer . . . . .	1909-14	1.80	4352	Spark plug wire . . . . .	1909-14	0.90
4028	Muffler shell (middle) . . . . .	1909-14	1.50	4353	Spark plug wire . . . . .	1909-14	0.90

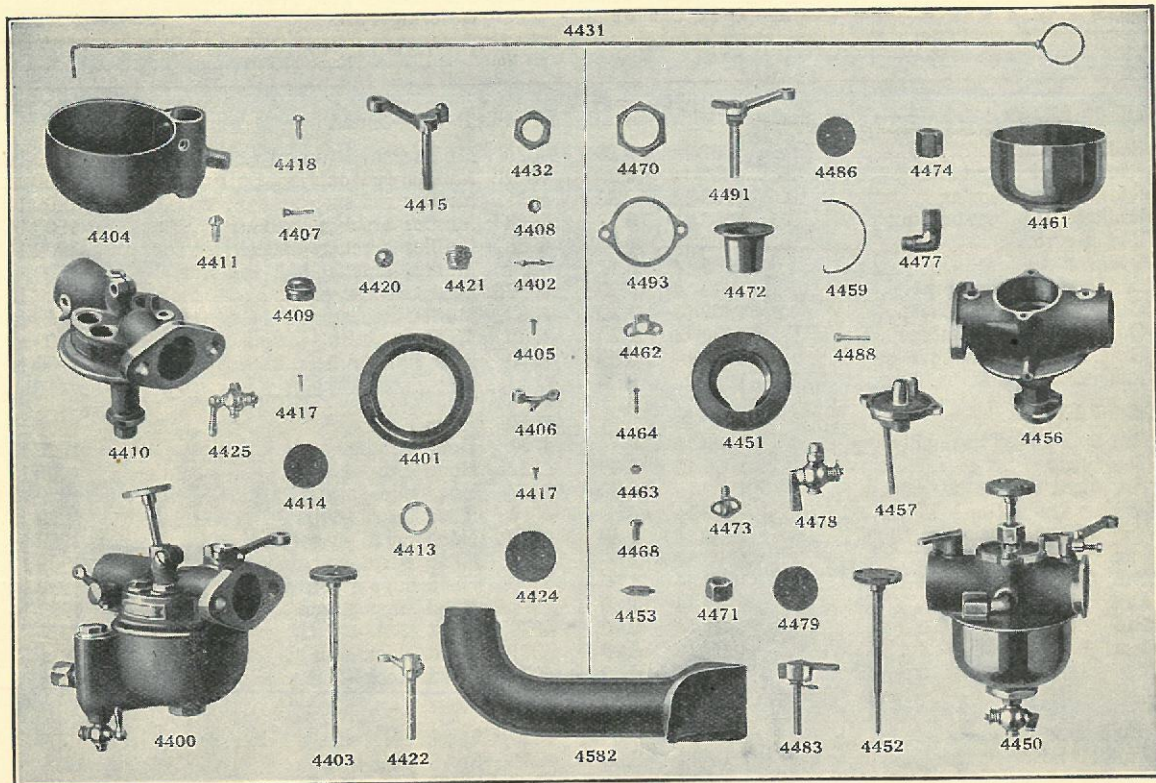 


Plate No. 14—1913 Kingston and Holley Carburetor Parts



Part No.	Name of Part	Year	Price	Part No.	Name of Part	Year	Price
<b>WIRING—Continued</b>				<b>HOLLEY CARBURETOR—1912</b>			
			Kr.				Kr.
4354	Spark plug wire terminal . . . . .	1909-14	0.18	4554	Float with lever . . . . .	1912	6.—
4355	COMMUTATOR WIRES WITH LOOM . . .		5.—	4559	Spray needle . . . . .	1912	3.60
4356	Commutator wires with terminal, each	1909-14	0.60	4572	Gasoline inlet elbow assembly . . . .	1912	3.30
4357	Commutator wire terminal (coil end)	1909-14	0.18	4573	Gasoline inlet needle . . . . .	1912	1.80
4359	Commutator wire loom support . . . .	1909-14	0.30	4581	Air throttle pull rod . . . . .		0.90
4360	Magneto to coil wire . . . . .	1909-14	1.20				
4361	Commutator loom rubber nipple . . . .	1909-14	0.18	<b>CARBURETOR ATTACHMENTS</b>			
4362	Commutator wire rubber nipple . . . .	1909-14	0.12	4126	Carburetor adjusting rod head . . . . .	1909-14	0.90
4363	Commutator wire support (on dash) . .	1909-14	0.30	4127A	Carb. adjusting rod bracket . . . . .		1.80
4366	Spark plug wire . . . . .	1911	1.20	4129A	Carb. adjusting rod with head . . . . .	1909-14	1.50
4367	Spark plug wire . . . . .	1911	1.20	4130	Carb. flange bolt and nut . . . . .	1909-14	0.30
4368	Spark plug wire . . . . .	1911	0.90	4134	Carb. flange gasket . . . . .	1909-14	0.30
4369	Spark plug wire . . . . .	1911	0.90	4431	Carb. priming rod . . . . .	1909-14	1.20
<b>KINGSTON CARBURETOR—1913 and 1915</b>				4180	Carb. hot air pipe . . . . .	1910-11	0.60
6160	Carburetor complete . . . . .	1915	54.—	4181	Carb. hot air pipe connection . . . . .		0.60
4400	Carburetor complete . . . . .	1913	54.—	4582	Carb. hot air pipe . . . . .	1912-14	1.20
4401	Float with lever . . . . .	1913	6.—	4538	Carb. hot air pipe . . . . .	1911	0.60
4402	Gasoline valve . . . . .	1913	3.—	<b>HEINZE COIL</b>			
4403	Gasoline needle valve . . . . .	1913	2.40	4602	Coil cover . . . . .	1910-13	9.—
<b>HOLLEY CARBURETOR—1913</b>				4604	Coil box with cover . . . . .	1910-13	36.—
4450	Carburetor complete . . . . .	1913	45.—	4611	Coil unit . . . . .	1910-13	27.—
4451	Float with lever . . . . .	1913	6.—	4613	Adjusting nut and ratchet . . . . .	1910-13	0.90
4452	Spray needle assembly . . . . .	1913	3.60	4616	Vibrator with plat. point . . . . .	1910-13	5.40
4453	Gasoline inlet needle . . . . .	1913	1.80	4618	Vibrator bridge with plat. point . . .	1910-13	5.40
				4638	Switch assembly . . . . .	1910-13	9.—
				4639	Switch plug . . . . .	1910-13	0.90

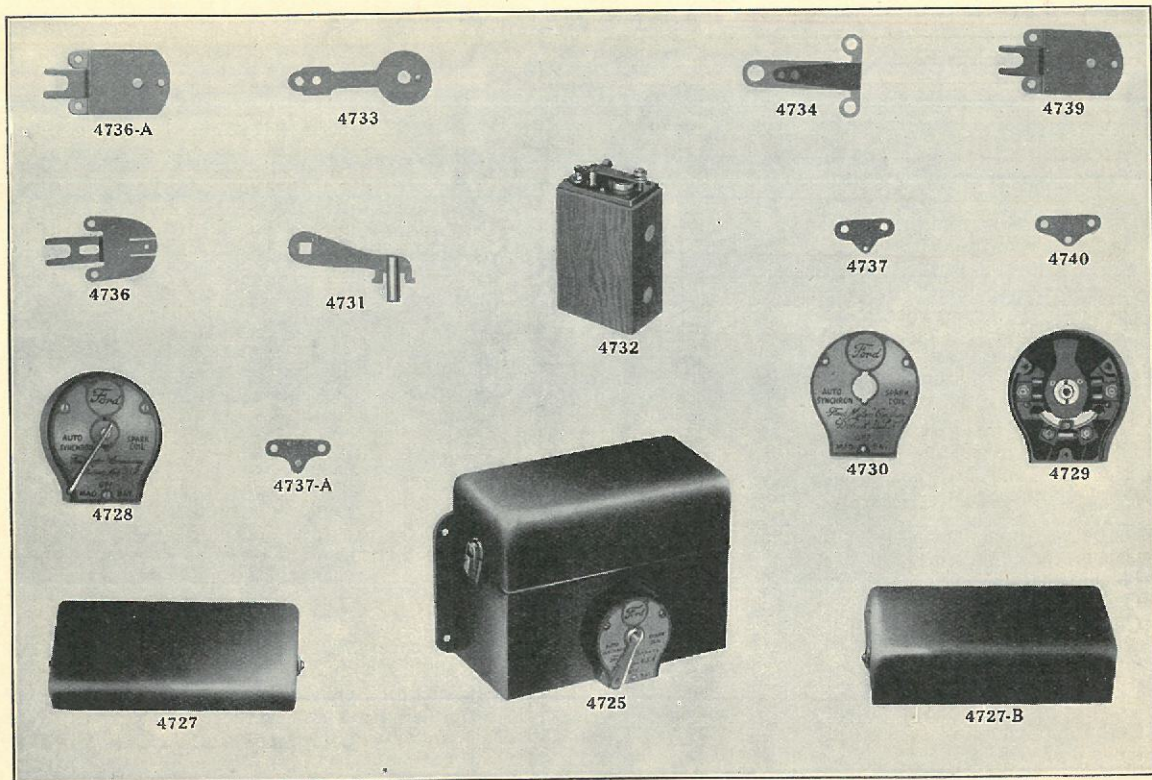 


Plate No. 15—Ford Coil Parts



Part No.	Name of Part	Year	Price	Part No.	Name of Part	Year	Price
<b>HEINZE COIL—Continued</b>				<b>FORD SPARK COIL—Continued</b>			
			Kr.				Kr.
4640	Switch base . . . . .	1910-13	4.50	4736	Heinze vibrator with plat. point . . . . .	1914	5.40
4641	Switch cover . . . . .	1910-13	1.50	4737	Heinze vibrator bridge with plat. point . . . . .	1914	5.40
4644	Switch lever . . . . .	1910-13	1.50	4739	Kingston vibrator spring with plat. point . . . . .	1914	5.40
4645	Switch lever knob . . . . .	1910-13	0.90	4740	Kingston vibrator bridge with plat. point . . . . .	1914	5.40
4646	Switch lever knob set screw . . . . .	1910-13	0.12				
<b>K. W. COIL</b>				<b>KINGSTON COIL—1913</b>			
4676	Coil box with cover . . . . .	1913	36.—	4701	Switch base . . . . .	1911-13	4.50
4677	Coil box cover . . . . .	1913	7.50	4702	Switch base cover . . . . .	1911-13	1.80
4678	Switch assembly . . . . .	1913	9.—	4705	Switch assembly . . . . .	1911-13	9.—
4679	Switch plug . . . . .	1913	0.90	4713	Coil unit . . . . .	1909-13	27.—
4680	Switch lever with knob . . . . .	1913	2.70	4714	Coil box with cover . . . . .	1909-13	36.—
4681	Coil unit . . . . .	1913	27.—	4715	Coil cover . . . . .	1909-13	9.—
4682	Vibrator spring with plat. point—lower . . . . .	1913	6.90	4716	Vibrator spring with plat. point . . . . .	1912-13	4.50
4683	Vibrator bridge with plat. point—upper . . . . .	1913	8.10	4717	Vibrator bridge with plat. point . . . . .	1912-13	4.50
<b>FORD SPARK COIL</b>				<b>FENDERS AND RUNNING BOARDS—56 INCH TREAD</b>			
4725	Coil . . . . .	1914	120.—	4800	Front fender—right . . . . .	1911-14	25.—
4726	Coil box with cover . . . . .	1914	24.—	4801	Front fender left . . . . .	1911-14	25.—
4727	Coil box cover . . . . .	1914	4.50	4802	Rear fender—right . . . . .	1911-14	25.—
4728	Switch assembly . . . . .	1914	7.20	4803	Rear fender—left . . . . .	1911-14	25.—
4729	Switch base assembly . . . . .	1914	4.50	4802B	Rear fender—right . . . . .	1912	30.—
4730	Switch cover . . . . .	1914	1.50	4802C	Rear fender—right . . . . .	1912	30.—
4731	Switch plug . . . . .	1914	0.90	4803B	Rear fender—left . . . . .	1912	30.—
4732	Coil unit . . . . .	1914	24.—	4803C	Rear fender—left . . . . .	1912	30.—
4733	K. W. vibrator with plat. point . . . . .	1914	6.90				
4734	K. W. vibrator bridge with plat. point . . . . .	1914	8.10				

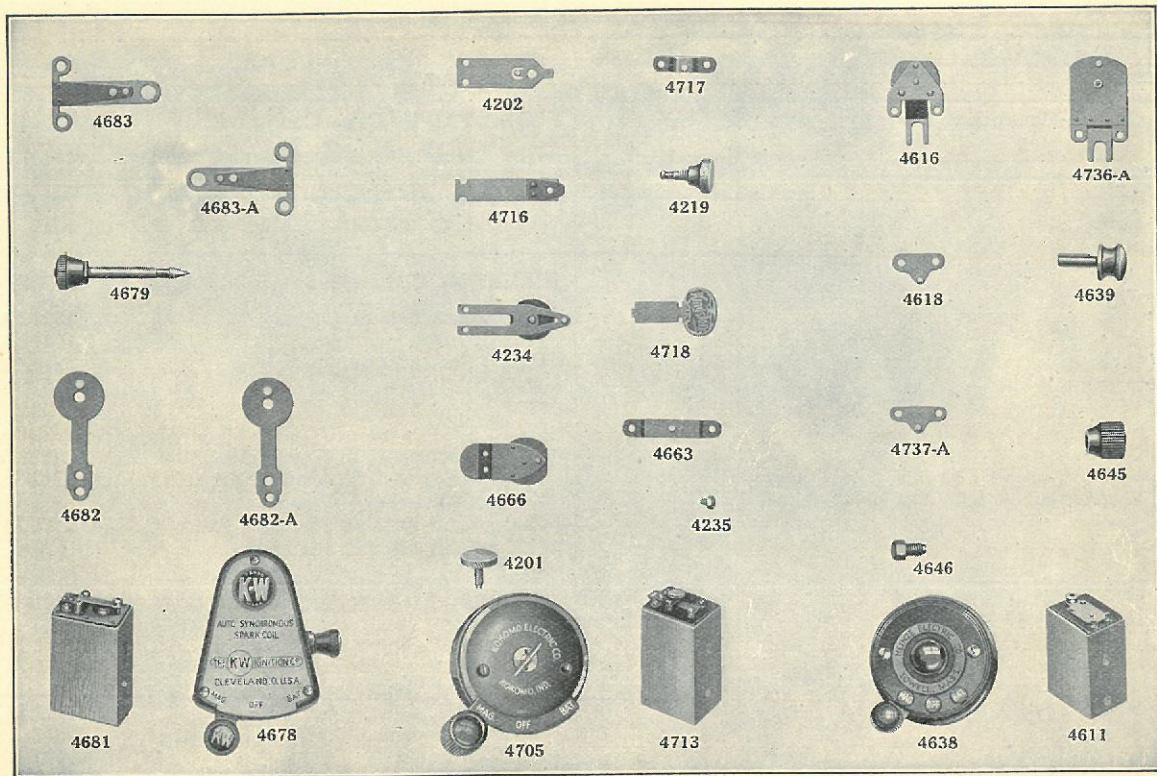 


Plate No. 16—Heinze, K. W. and Ford Coil Parts



Part No.	Name of Part	Year	Price	Part No.	Name of Part	Year	Price
<b>FENDERS AND RUNNING BOARDS—56 INCH TREAD</b>				<b>FENDERS AND RUNNINGS BOARD—60 INCH TREAD</b>			
—Continued				—BLUE—Continued			
4804	Rear fender iron—right and left . . . . .	1912	2.40	4823C	Rear fender—right . . . . .	1912	35.—
4804B	Rear fender irons—right and left . . . . .	1912	4.50	4824	Rear fender iron—right and left . . . . .	1911-12	2.40
4804C	Rear fender irons—right and left . . . . .	1912	2.40		Rear fender iron—right and left . . . . .	1912	
4804D	Rear fender iron—right and left . . . . .	1913-14	2.40		Rear fender iron—right . . . . .	1913	
4804E	Rear fender iron—right . . . . .	1913	4.50		Rear fender iron—left . . . . .	1913	
4804F	Rear fender iron—left . . . . .	1913	4.50	4824B	Rear fender irons—right and left . . . . .	1913	4.50
4805	Rear fender iron bolt and nut . . . . .	1912-14	0.60	4825	Front fender irons—right and left . . . . .	1909-12	6.—
4808	Front fender iron bolt . . . . .	1912-14	0.30		Front fender irons—right and left . . . . .	1913	
4809	Front fender iron—right or left . . . . .	1909-14	6.—	4826	Running board shield—right . . . . .	1911-12	20.—
4812	Running board—right or left . . . . .	1909-14	6.—		Running board shield—right . . . . .	1913	
4814	Running board metal shield—right . . . . .	1912-14	20.—	4827	Running board shield—left . . . . .	1911-12	20.—
4815	Running board metal shield—left . . . . .	1912-14	20.—		Running board shield—left . . . . .	1913	
4816	Running board truss rod—front with nuts . . . . .	1909-14	1.50	4828	Running board bracket . . . . .	1909-12	4.50
4817	Running board truss rod—rear with nuts . . . . .	1909-14	1.50		Running board bracket . . . . .	1913	
4818	Running board bracket . . . . .	1909-15	4.50	4829	Running board truss rod—front . . . . .	1909-12	1.50
<b>FENDERS AND RUNNING BOARDS—60 INCH TREAD</b>				Running board truss rod—front . . . . .			
—BLUE				1913			
4820	Front fender—right . . . . .	1911-12	25.—	4830	Running board truss rod—rear . . . . .	1909-12	1.50
4820B	Front fender—right . . . . .	1913	25.—		Running board truss rod—rear . . . . .	1913	
4821	Front fender—left . . . . .	1911-12	25.—	<b>SPECIAL TOOLS</b>			
4821B	Front fender—left . . . . .	1913	25.—	1349	Hub cap wrench . . . . .		1.50
4822	Rear fender—right . . . . .	1911-12	25.—	1387	Adjustable wrench . . . . .		2.40
4822B	Rear fender—right . . . . .	1913	25.—	1902	Screw driver . . . . .		1.50
4823	Rear fender—left . . . . .	1911-12	25.—	1903	Pliers . . . . .		1.80
4823D	Rear fender—left . . . . .	1913	25.—	1917	Double end wrench . . . . .		1.20
4823B	Rear fender—left . . . . .	1912	35.—	1924	<sup>3</sup> / <sub>8</sub> " socket wrench . . . . .		3.—
				1929	Fly wheel cap screw wrench . . . . .		1.80

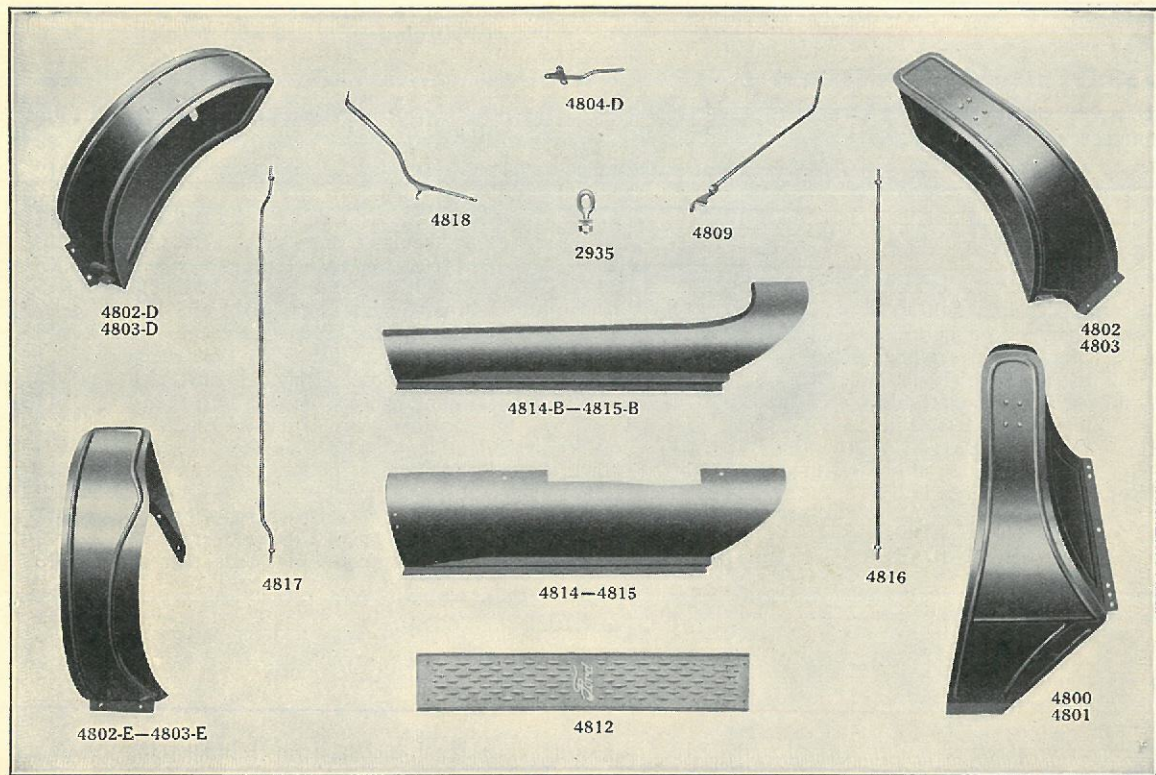 


Plate No. 17—Fender Parts



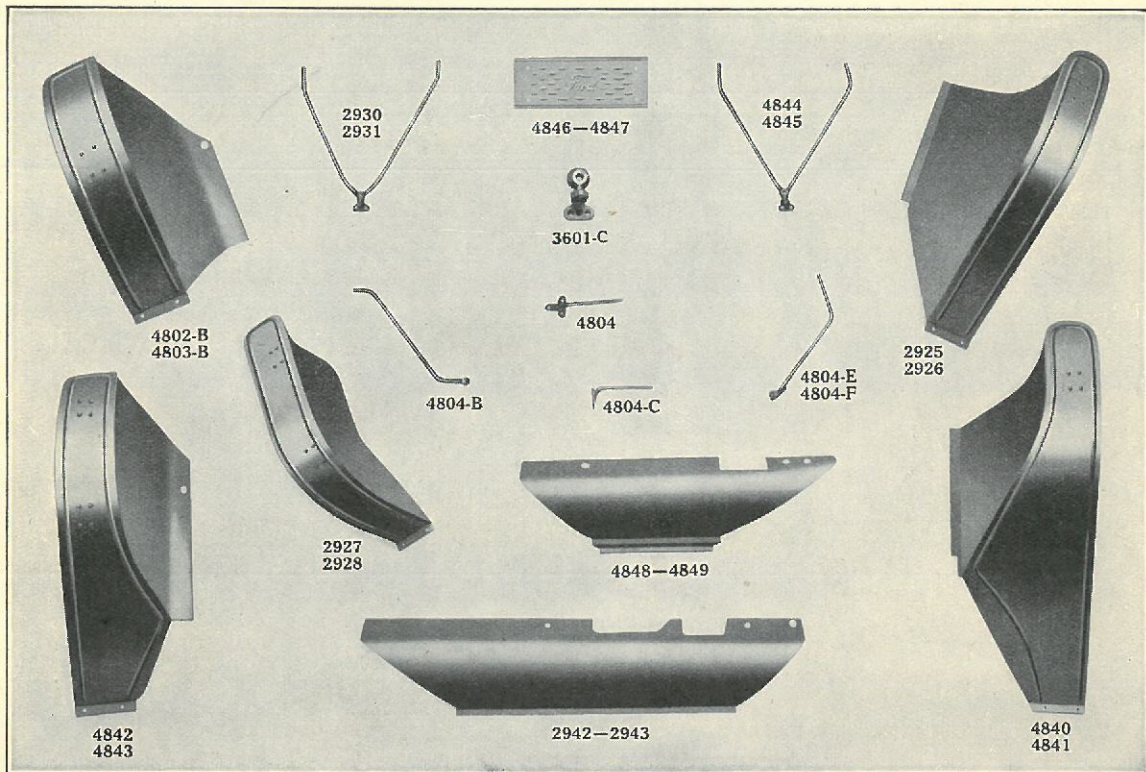 



Plate No. 18—Fender Parts





Part No.	Name of Part	Price	Part No.	Name of Part	Price
<b>SPECIAL TOOLS—Continued</b>			<b>SPECIAL TOOLS—Continued</b>		
		Kr.			Kr.
1930X	Valve spring lifter . . . . .	4.50	2323	$\frac{3}{8}$ " open end wrench . . . . .	2.10
1957	Valve grinder . . . . .	6.—	2324	Connecting rod clamp screw wrench . . . . .	2.40
1933X	Rear wheel puller assembly . . . . .	9.—	2328	$\frac{3}{8}$ " brace socket wrench . . . . .	3.60
1936X	Cam gear puller . . . . .	9.—	2331	Piston ring squeezer . . . . .	1.50
1953X	Transmission clutch puller . . . . .	9.—	2332	Magnet screw brace screw driver . . . . .	3.—
1974	Drive shaft housing stud nut wrench for $\frac{3}{8}$ " nut . . . . .	2.40	2333	Large cam gear lock nut wrench . . . . .	2.40
1974B	Drive shaft housing stud nut wrench for $\frac{19}{32}$ " nut . . . . .	2.40	2335	Spark plug and cyl. head bolt wrench . . . . .	3.—
1975	Rear axle housing bolt nut wrench . . . . .	3.—	2336	Tool roll . . . . .	2.10
1978	Valve seat reamer . . . . .	15.—	2337	Oil can . . . . .	1.20
2319	Screw driver for cam shaft set screw . . . . .	3.—	2338	Tire pump . . . . .	15.—
2320	$\frac{3}{8}$ " T socket wrench . . . . .	3.—	2340	Tire irons, each . . . . .	0.90
2321	Socket wrench for crank shaft bearing bolt nut . . . . .	3.—	2341	Crank shaft bearing bolt special wrench . . . . .	3.—
2322	$\frac{3}{8}$ " L socket wrench . . . . .	3.—	2342	Metal tool box . . . . .	24.—

 OBS. Alle dele for 1914 aars model passer til model 1915 og 1916.

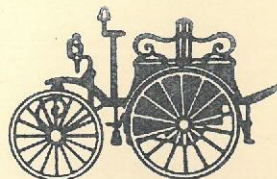

DANSK VETERANBIL KLUB

